



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|----------------|---------------------|---------------------------------|------------------------|-----------------|------------------|
| D 52 I | | B | Wear Sensor | NU 2010 | |
| D 52 I | | B | Rivet | NU 2009 | |
| D 52 IB | | B | Wear Sensor | NU 2010 | |
| D 52 IB | | B | Rivet | NU 2009 | |
| D 52 IS | | B | Wear Sensor | NU 2166 | |
| D 52 IP | | B | Rivet | NU 2009 | |
| D 52 I | | M | Anti-Flash Plate | NU 2195 | |
| D 89 I | | M | Wear Sensor | NU 2014 | |
| D 119 I Ver. 2 | | R | Wear Sensor | A- 331-S | NU2138 |
| D 134 | | M | Wear Sensor | NU 3072 | |
| D 136 | | M | Socket | NU 3026 | |
| D 139 I | | B | Piston Clip | NU 2011 | |
| D 139 I | | M | Wear Sensor | A- 71-S | NU2071 |
| D 139 I | | R | Wear Sensor | NU 2091 | |
| D 139 I | | M | Anti-Flash Plate | NU 2169 | |
| D 145 | | M | Electronic Wear Sensor | W 2064001 | |
| D 147 | | M | Spring | A- 157-WC | NU3009-1 |
| D 147 | | M | Pin | A- 157-PK | NU3009-2 |
| D 149 I | | B | Wear Sensor | NU 2014 | |
| D 149 I OE | | M | Wear Sensor | NU 2014 | |
| D 150 I | | B | Piston Clip | NU 2007 | |
| D 150 OR | | B | Hold Down | A- 08-S | NU2008 |
| D 150 OL | | B | Hold Down | A- 08-S | NU2008 |
| D 151 OR | | R | Hold Down | NU 2000 | |
| D 151 OL | | R | Hold Down | NU 2000 | |
| D 151 OR | | R | Wear Sensor | NU 2002 | |
| D 151 OL | | R | Wear Sensor | NU 2002 | |
| D 151 I | | R | Piston Clip | NU 2005 | |
| D 152 OR | | B | Hold Down | NU 2000 | |
| D 152 OL | | B | Hold Down | NU 2000 | |
| D 152 IL | | R | Piston Clip | NU 2001 | |
| D 152 IR | | R | Piston Clip | NU 2001 | |
| D 152 OL | | B | Wear Sensor | NU 2002 | |
| D 152 OR | | B | Wear Sensor | NU 2002 | |
| D 153 O | | B | Wear Sensor | NU 2015 | |
| D 153 O | | B | Rivet | NU 2009 | |
| D 154 I | | R | Wear Sensor | NU 2010 | |
| D 154 I | | B | Rivet | NU 2009 | |
| D 154 IF | | M | Wear Sensor | NU 2010 | |
| D 154 IF | | B | Rivet | NU 2009 | |
| D 154 IP | | M | Wear Sensor | NU 2010 | |
| D 154 IP | | B | Rivet | NU 2009 | |
| D 154 IP | | M | Piston Clip | NU 2011 | |
| D 154 IB | | M | Piston Clip | NU 2011 | |
| D 154 I | | R | Piston Clip | NU 2011 | |
| D 154 IF | | M | Piston Clip | NU 2031 | |
| D 154 I | | M | Plug | NU 2160 | |
| D 154 I | | M | Anti-Flash Plate | NU 2174 | |
| D 154 IB | | M | Anti-Flash Plate | NU 2174 | |
| D 159 I | | M | Anti-Flash Plate | NU 2181 | |
| D 159 I | | B | Piston Clip | NU 2011 | |
| D 159 O | | R | Wear Sensor | NU 2010 | |
| D 159 O | | M | Wear Sensor | NU 2025 | |
| D 159 O | | B | Rivet | NU 2009 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|----------------------|-----------------|------------------|
| D 160 | | M | Socket | NU 3026 | |
| D 162 I | | B | Piston Clip | NU 2011 | |
| D 162 I | | M | Wear Sensor | A- 71-S | NU2071 |
| D 162 I | | R | Wear Sensor | NU 2091 | |
| D 162 I | | M | Anti-Flash Plate | NU 2169 | |
| D 170 | | B | Piston Clip | NU 2019 | |
| XD 178 | | M | Socket | NU 3026 | |
| D 179 I | | B | Piston Clip | NU 2020 | |
| D 179 O | | B | Hold Down | NU 2021 | |
| D 181 OL | | R | Hold Down | NU 2000 | |
| D 181 OR | | R | Hold Down | NU 2000 | |
| D 181 IR | | R | Piston Clip | NU 2001 | |
| D 181 IL | | R | Piston Clip | NU 2001 | |
| D 181 OL | | R | Wear Sensor | NU 2002 | |
| D 181 OR | | R | Wear Sensor | NU 2002 | |
| D 182 OR | | R | Hold Down | NU 2000 | |
| D 182 OL | | R | Hold Down | NU 2000 | |
| D 182 OR | | R | Wear Sensor | NU 2002 | |
| D 182 OL | | R | Wear Sensor | NU 2002 | |
| D 182 I | | R | Piston Clip | NU 2005 | |
| D 183 O | | B | Wear Sensor | NU 2010 | |
| D 183 O | | B | Rivet | NU 2009 | |
| D 183 I | | B | Piston Clip | NU 2011 | |
| D 185 I | | M | Wear Sensor | NU 3008 | |
| D 189 I | | M | Wear Sensor | NU 3008 | |
| D 190 O | | R | Wear Sensor | NU 2010 | |
| D 190 O | | B | Rivet | NU 2009 | |
| D 190 I | | R | Piston Clip | NU 2011 | |
| D 190 OB | | R | Wear Sensor | NU 2137 | |
| D 190 OB | | B | Rivet | NU 2009 | |
| D 191 I | | B | Piston Clip | NU 2011 | |
| D 191 I | | M | Wear Sensor | A- 71-S | NU2071 |
| D 191 I | | R | Wear Sensor | NU 2091 | |
| D 191 I | | M | Anti-Flash Plate | NU 2169 | |
| D 194 I | | M | Wear Sensor | NU 3008 | |
| D 194 O | 021400 | M | Wear Sensor RH | NU 3109 | |
| D 194 O | 021400 | M | Wear Sensor LH | NU 3110 | |
| XD 195 | | M | Socket | NU 3026 | |
| D 199 OL | | B | Hold Down | A- 08-S | NU2008 |
| D 199 OR | | B | Hold Down | A- 08-S | NU2008 |
| D 199 I | | B | Piston Clip | NU 2028 | |
| D 200 OL | | B | Hold Down | A- 08-S | NU2008 |
| D 200 OL OE | | R | Hold Down | A- 08-S | NU2008 |
| D 200 OR | | B | Hold Down | A- 08-S | NU2008 |
| D 200 OR OE | | R | Hold Down | A- 08-S | NU2008 |
| D 200 I OE | | R | Piston Clip | NU 2028 | |
| D 200 I | | B | Piston Clip | NU 2028 | |
| D 200 OL | | B | Wear Sensor | NU 2141 | |
| D 200 OL OE | | R | Wear Sensor | NU 2141 | |
| D 200 OR OE | | R | Wear Sensor | NU 2141 | |
| D 200 OR | | B | Wear Sensor | NU 2141 | |
| D 202 IP | | M | Wear Sensor | NU 2010 | |
| D 202 IF | | M | Wear Sensor | NU 2010 | |
| D 202 I | | R | Wear Sensor | NU 2010 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|---------------|---------------------|---------------------------------|----------------------|-----------------|------------------|
| D 202 IP | | M | Piston Clip | NU 2011 | |
| D 202 I | | R | Piston Clip | NU 2011 | |
| D 202 IF | | M | Piston Clip | NU 2031 | |
| D 202 I | | M | Anti-Flash Plate | NU 2174 | |
| D 202 I | | B | Rivet | NU 2009 | |
| D 202 IF | | B | Rivet | NU 2009 | |
| D 202 IP | | B | Rivet | NU 2009 | |
| D 204 O | | R | Wear Sensor | NU 2002 | |
| D 205 O OE | | R | Hold Down | NU 2052 | |
| D 205 O | | B | Hold Down | NU 2052 | |
| D 213 OT | | M | Hole Cover | NU 3010 | |
| D 214 O | | R | Wear Sensor | NU 2010 | |
| D 214 OS | | M | Wear Sensor | NU 2025 | |
| D 214 O OE | | M | Wear Sensor | NU 2025 | |
| D 214 OS OE | | M | Wear Sensor | NU 2025 | |
| D 214 O | | M | Wear Sensor | NU 2025 | |
| D 214 I | | B | Piston Clip | NU 2031 | |
| D 214 OB | | R | Wear Sensor | NU 2137 | |
| D 214 O | | B | Rivet | NU 2009 | |
| D 214 OB | | B | Rivet | NU 2009 | |
| D 214 O OE | | B | Rivet | NU 2009 | |
| D 215 O OE | | M | Wear Sensor | NU 2025 | |
| D 215 O | | M | Wear Sensor | NU 2025 | |
| D 215 O OE GM | | M | Wear Sensor | NU 2025 | |
| D 215 I GM | | M | Piston Clip | NU 2031 | |
| D 215 I | | B | Piston Clip | NU 2031 | |
| D 215 O OE | | M | Hold Down | A- 38-S | NU2038 |
| D 215 O OE GM | | M | Hold Down | A- 38-S | NU2038 |
| D 215 O | | B | Hold Down | A- 38-S | NU2038 |
| D 215 O | | R | Wear Sensor | A- 71-S | NU2071 |
| D 215 O OE GM | | M | Wear Sensor | NU 2136 | |
| D 215 O OE | | M | Wear Sensor | NU 2136 | |
| D 215 O | | M | Wear Sensor | NU 2136 | |
| D 215 O | | R | Wear Sensor | NU 2137 | |
| D 216 | | M | Spring | A- 157-WC | NU3009-1 |
| D 216 | | M | Pin | A- 157-PK | NU3009-2 |
| D 217 | | M | Spring | A- 157-WC | NU3009-1 |
| D 217 | | M | Pin | A- 157-PK | NU3009-2 |
| D 219 I | | B | Spring | NU 2046 | |
| D 219 I | | B | Spring | NU 2047 | |
| D 219 O | | B | Spring | NU 2048 | |
| D 219 O | | B | Spring | NU 2049 | |
| D 220 | | B | Piston Clip | NU 2032 | |
| D 221 I | | B | Spring | NU 2046 | |
| D 221 I | | B | Spring | NU 2047 | |
| D 221 O | | B | Spring | NU 2048 | |
| D 221 O | | B | Spring | NU 2049 | |
| D 222 | | B | Piston Clip | NU 2032 | |
| D 226 | | M | Wear Sensor | NU 3072 | |
| D 227 | | M | Spring Kit | NU 3040 | |
| D 228 | | M | Spring | NU 3039-1 | |
| D 228 | | M | Pin | NU 3039-2 | |
| D 229 IL | | M | Wear Sensor | A- 346-S | NU3000 |
| D 229 IR | | M | Wear Sensor | A- 346-S | NU3000 |



| FMSI Number | NUCAP Europe Number | R→RIVETED M→MOLDED B→BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|----------------------|-----------------|------------------|
| D 230 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 231 OT | | M | Hole Cover | NU 3010 | |
| D 237 OL | | B | Hold Down | NU 2000 | |
| D 237 OR | | B | Hold Down | NU 2000 | |
| D 237 OL | | B | Wear Sensor | NU 2002 | |
| D 237 OR | | B | Wear Sensor | NU 2002 | |
| D 237 IR | | B | Piston Clip | NU 2035 | |
| D 237 IL | | B | Piston Clip | NU 2035 | |
| D 240 O | | M | Wear Sensor | NU 3053 | |
| XD 242 | | M | Wear Sensor | NU 3131 | |
| XD 242 | | M | Spring | NU K-242-43 | |
| D 245 O | | M | Wear Sensor | NU 3056 | |
| D 249 O | | B | Hold Down | NU 2052 | |
| D 249 O OE | | B | Hold Down | NU 2052 | |
| D 253 | | M | Hole Cover | NU 3010 | |
| D 253 B | | M | Piston Clip | NU 3011 | |
| D 255 | | M | Spring | A- 157-WC | NU3009-1 |
| D 255 | | M | Pin | A- 157-PK | NU3009-2 |
| D 256 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 257 I | | B | Piston Clip | NU 2034 | |
| D 257 O | | B | Hold Down LH | NU 2036 | |
| D 257 O | | B | Hold Down RH | NU 2037 | |
| D 259 I | | B | Spring | NU 2046 | |
| D 259 I | | B | Spring | NU 2047 | |
| D 259 O | | B | Spring | NU 2050 | |
| D 259 O | | B | Spring | NU 2051 | |
| D 260 | | M | Socket | NU 3026 | |
| D 261 O OE | | M | Wear Sensor | NU 2025 | |
| D 261 O | | M | Wear Sensor | NU 2025 | |
| D 261 O OE | | M | Hold Down | A- 38-S | NU2038 |
| D 261 O | | B | Hold Down | A- 38-S | NU2038 |
| D 261 I | | B | Piston Clip | NU 2041 | |
| D 261 O | | R | Wear Sensor | A- 71-S | NU2071 |
| D 261 O OE | | M | Wear Sensor | NU 2136 | |
| D 261 O | | M | Wear Sensor | NU 2136 | |
| D 261 O | | R | Wear Sensor | NU 2137 | |
| D 262 O | | M | Wear Sensor | NU 2025 | |
| D 262 O OE | | M | Wear Sensor | NU 2025 | |
| D 262 O | | B | Hold Down | A- 38-S | NU2038 |
| D 262 O OE | | M | Hold Down | A- 38-S | NU2038 |
| D 262 O | | R | Wear Sensor | A- 71-S | NU2071 |
| D 262 O | | M | Wear Sensor | NU 2136 | |
| D 262 O OE | | M | Wear Sensor | NU 2136 | |
| D 262 O | | R | Wear Sensor | NU 2137 | |
| D 263 O | | M | Wear Sensor | NU 3056 | |
| D 264 I | | M | Piston Clip | NU 3011 | |
| D 264 I | | M | Retainer | NU 3013 | |
| D 264 O | | M | Hold Down | NU 3014 | |
| D 264 I | | M | Wear Sensor | NU 3021 | |
| D 266 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 272 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 273 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 274 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 275 I | | M | Wear Sensor | A- 346-S | NU3000 |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|------------------------|-----------------|------------------|
| D 276 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 278 | | M | Electronic Wear Sensor | W 2064101 | |
| D 278 | | M | Spring Kit | A- 184-S Assy | |
| D 279 | | M | Electronic Wear Sensor | W 2264611 | |
| D 279 | | M | Hole Cover | NU 3010 | |
| D 279 B | | M | Piston Clip | NU 3036 | |
| D 281 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 282 O | | M | Wear Sensor | NU 3004 | |
| D 282 O | | M | Wear Sensor | J- 245-S | NU3055 |
| D 289 O | | R | Wear Sensor | NU 2010 | |
| D 289 OS OE | | M | Wear Sensor | NU 2025 | |
| D 289 OS | | M | Wear Sensor | NU 2025 | |
| D 289 O OE | | M | Wear Sensor | NU 2025 | |
| D 289 O | | M | Wear Sensor | NU 2025 | |
| D 289 I | | B | Piston Clip | NU 2031 | |
| D 289 I OE | | M | Piston Clip | NU 2031 | |
| D 289 O | | M | Wear Sensor | NU 2136 | |
| D 289 OB | | M | Wear Sensor | NU 2136 | |
| D 289 OB | | R | Wear Sensor | NU 2137 | |
| D 289 O | | B | Rivet | NU 2009 | |
| D 289 OB | | B | Rivet | NU 2009 | |
| D 290 | | M | Spring Kit | NU 3040 | |
| D 291 O | | M | Wear Sensor | NU 3002 | |
| D 291 I | | M | Wear Sensor | NU 3008 | |
| D 293 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 294 I | | M | Wear Sensor | A- 71-S | NU2071 |
| D 294 I | | R | Wear Sensor | NU 2091 | |
| D 294 O | | B | Spring | A- 157-WC | NU3009-1 |
| D 294 I | | B | Spring | A- 157-WC | NU3009-1 |
| D 294 I | | B | Pin | A- 157-PK | NU3009-2 |
| D 294 O | | B | Pin | A- 157-PK | NU3009-2 |
| D 295 I | | M | Wear Sensor | A- 71-S | NU2071 |
| D 295 I | | R | Wear Sensor | NU 2091 | |
| D 295 I | | B | Spring | A- 157-WC | NU3009-1 |
| D 295 O | | B | Spring | A- 157-WC | NU3009-1 |
| D 295 I | | B | Pin | A- 157-PK | NU3009-2 |
| D 295 O | | B | Pin | A- 157-PK | NU3009-2 |
| D 298 | | M | Hole Cover | NU 3010 | |
| D 298 B | | M | Piston Clip | NU 3034 | |
| D 300 | | M | Wear Sensor | A- 350-S | NU3001 |
| D 301 O | | M | Wear Sensor | NU 3052 | |
| D 302 | | M | Wear Sensor | NU 3131 | |
| D 306 | | M | Spring | NU 3039-1 | |
| D 306 | | M | Pin | NU 3039-2 | |
| D 308 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 309 O | | M | Wear Sensor | NU 3004 | |
| D 309 O | | M | Wear Sensor | J- 245-S | NU3055 |
| D 310 OL | | B | Hold Down | NU 2000 | |
| D 310 OR | | B | Hold Down | NU 2000 | |
| D 310 OL | | B | Wear Sensor | NU 2002 | |
| D 310 OR | | B | Wear Sensor | NU 2002 | |
| D 310 IL | | B | Piston Clip | NU 2035 | |
| D 310 IR | | B | Piston Clip | NU 2035 | |
| D 311 | | M | Wear Sensor | NU 3021 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|------------------------|-----------------|------------------|
| D 312 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 313 IB | | M | Wear Sensor | NU 2010 | |
| D 313 I | | B | Wear Sensor | NU 2010 | |
| D 313 I | | M | Plug | NU 2160 | |
| D 313 IB | | M | Anti-Flash Plate | NU 2195 | |
| D 313 IS | | B | Wear Sensor | NU 2166 | |
| D 313 I | | M | Anti-Flash Plate | NU 2195 | |
| D 313 I | | B | Rivet | NU 2009 | |
| D 313 IB | | B | Rivet | NU 2009 | |
| D 313 IP | | B | Rivet | NU 2009 | |
| D 314 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 315 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 315 O | | B | Hold Down | NU 2072 | |
| D 315 I | | B | Piston Clip | NU 2073 | |
| D 315 O | | R | Wear Sensor | NU 2091 | |
| D 316 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 316 O | | B | Hold Down | NU 2072 | |
| D 316 O | | R | Wear Sensor | NU 2091 | |
| D 317 I | | M | Piston Clip | NU 3011 | |
| D 317 I | | M | Retainer | NU 3013 | |
| D 317 O | | M | Hold Down | NU 3014 | |
| D 317 I | | M | Wear Sensor | NU 3021 | |
| D 318 O | | M | Hold Down | NU 3059 | |
| D 319 I | | M | Wear Sensor | NU 3007 | |
| D 319 I | | M | Piston Clip | NU 3018 | |
| D 320 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 321 | | M | Spring Kit | A- 184-S Assy | |
| D 322 | | M | Hole Cover | NU 3010 | |
| D 322 B | | M | Piston Clip | NU 3036 | |
| D 323 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 324 I | | B | Piston Clip | NU 2066 | |
| D 324 OR | | B | Hold Down RH | NU 2067 | |
| D 324 OL | | B | Hold Down LH | NU 2068 | |
| D 325 | | M | Wear Sensor RH | NU 3106 | |
| D 325 | | M | Wear Sensor LH | NU 3107 | |
| D 326 O | | B | Hold Down | NU 2052 | |
| D 330 | 005701 | M | Electronic Wear Sensor | W 1080205 | |
| D 331 I | | M | Wear Sensor | NU 3085 | |
| D 333 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 334 I | | M | Wear Sensor | A- 346-S | NU3000 |
| XD 336 | | M | Wear Sensor | A- 350-S | NU3001 |
| D 340 | | M | Spring Kit | A- 184-S Assy | |
| D 341 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 342 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 344 I | | B | Piston Clip | NU 2081 | |
| D 344 O | | B | Hold Down RH | A- 82-RH | NU2082 |
| D 344 O | | B | Hold Down LH | A- 83-LH | NU2083 |
| D 346 I | | B | Piston Clip | NU 2007 | |
| D 346 OL | | B | Hold Down | A- 08-S | NU2008 |
| D 346 OR | | B | Hold Down | A- 08-S | NU2008 |
| D 347 | | B | Spring | A- 157-WC | NU3009-1 |
| D 347 B | | B | Spring | A- 157-WC | NU3009-1 |
| D 347 | | B | Pin | A- 157-PK | NU3009-2 |
| D 347 B | | B | Pin | A- 157-PK | NU3009-2 |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|-------------------------|-----------------|------------------|
| D 347 B | | B | Rivet | NU 3040-2 | |
| D 347 | | B | Spring | A- 84-WIRE | NU3063-1 |
| D 347 | | B | Rivet | A- 85-PK | NU3063-2 |
| D 348 I | | M | Piston Clip | NU 3011 | |
| D 348 I | | M | Retainer | NU 3013 | |
| D 348 O | | M | Plug | NU 3048 | |
| D 348 I | | M | Wear Sensor | NU 3052 | |
| D 349 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 350 | | M | Hole Cover | NU 3010 | |
| D 350 B | | M | Piston Clip | NU 3062 | |
| D 352 | | M | Wear Sensor RH | NU 3106 | |
| D 352 | | M | Wear Sensor LH | NU 3107 | |
| D 353 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 353 O | | B | Hold Down | NU 2072 | |
| D 353 I | | B | Piston Clip | NU 2073 | |
| D 353 O | | R | Wear Sensor | NU 2091 | |
| D 354 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 354 O | | B | Hold Down | NU 2072 | |
| D 354 O | | R | Wear Sensor | NU 2091 | |
| D 355 O | | M | Wear Sensor | NU 3056 | |
| XD 356 | | M | Wear Sensor | NU 3131 | |
| XD 356 | | M | Spring | NU K-242-43 | |
| D 357 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 358 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 358 I | | M | Spring Kit | A- 184-S Assy | |
| D 358 O | | M | Spring Kit | A- 184-S Assy | |
| D 359 | | M | Piston Clip | NU 3011 | |
| XD 361 O | 011501 | M | Hold Down | NU 3059 | |
| D 362 | | M | Spring Kit | A- 184-S Assy | |
| D 363 | | M | Wear Sensor | NU 3021 | |
| D 364 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 365 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 367 | | B | Piston Clip | NU 2081 | |
| D 367 | | B | Hold Down RH | A- 82-RH | NU2082 |
| D 367 | | B | Hold Down LH | A- 83-LH | NU2083 |
| D 368 O | | B | Hold Down | A- 38-S | NU2038 |
| D 368 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 368 O | | R | Wear Sensor | NU 2091 | |
| D 368 I | | B | Piston Clip | A- 94-S | NU2094 |
| D 368 O | | M | Wear Sensor | NU 2146 | |
| D 369 O | | B | Hold Down | A- 38-S | NU2038 |
| D 369 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 369 O | | R | Wear Sensor | NU 2091 | |
| D 369 I | | B | Piston Clip | A- 94-S | NU2094 |
| D 369 O | | M | Wear Sensor | NU 2146 | |
| D 370 O | | B | Hold Down | A- 38-S | NU2038 |
| D 370 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 370 O | | R | Wear Sensor | NU 2091 | |
| D 370 I | | B | Piston Clip | A- 94-S | NU2094 |
| D 370 O | | M | Wear Sensor | NU 2146 | |
| D 370 I | | B | Piston Clip | NU 2196 | |
| D 373 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 374 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 376 I | | B | Piston Clip 2 per plate | NU 2087 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|----------------------|-----------------|------------------|
| D 376 O | | B | Hold Down | NU 2088 | |
| D 376 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 376 O | | R | Wear Sensor | NU 2091 | |
| D 377 I | | M | Wear Sensor | A- 71-S | NU2071 |
| D 377 I | | R | Wear Sensor | NU 2091 | |
| D 377 O | | B | Hold Down | NU 2090 | |
| D 378 I | | B | Wear Sensor | NU 2130 | |
| D 381 L | | B | Piston Clip | NU 2139 | |
| D 382 | | M | Spring | A- 157-WC | NU3009-1 |
| D 382 | | M | Pin | A- 157-PK | NU3009-2 |
| D 383 I | | M | Wear Sensor | NU 3038 | |
| D 385 O | | B | Hold Down LH | NU 2036 | |
| D 385 O | | B | Hold Down RH | NU 2037 | |
| D 385 I | | B | Piston Clip | A- 34-S | NU2176 |
| D 387 O OE | | R | Hold Down | NU 2052 | |
| D 387 O | | B | Hold Down | NU 2052 | |
| XD 388 O | | M | Wear Sensor | NU 3056 | |
| D 390 | | M | Wear Sensor | NU 3038 | |
| D 391 | | M | Spring | A- 157-WC | NU3009-1 |
| D 391 | | M | Pin | A- 157-PK | NU3009-2 |
| D 392 O | | B | Wear Sensor | NU 2015 | |
| D 394 | | M | Hole Cover | NU 3010 | |
| D 394 B | | M | Piston Clip | NU 3034 | |
| D 395 | | M | Hole Cover | NU 3010 | |
| D 395 B | | M | Piston Clip | NU 3011 | |
| D 396 | | M | Hole Cover | NU 3010 | |
| D 396 B | | M | Piston Clip | NU 3037 | |
| XD 397 | | M | Wear Sensor | A- 350-S | NU3001 |
| D 398 | | M | Wear Sensor | NU 3021 | |
| XD 399 | | M | Wear Sensor | NU 3021 | |
| D 401 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 402 I | | M | Wear Sensor | NU 3007 | |
| D 403 | | M | Hole Cover | NU 3010 | |
| D 403 B | | M | Piston Clip | NU 3076 | |
| D 405 | | M | Spring | A- 157-WC | NU3009-1 |
| D 405 | | M | Pin | A- 157-PK | NU3009-2 |
| D 406 | | M | Spring | A- 157-WC | NU3009-1 |
| D 406 | | M | Pin | A- 157-PK | NU3009-2 |
| D 407 | | M | Spring | A- 157-WC | NU3009-1 |
| D 407 | | M | Pin | A- 157-PK | NU3009-2 |
| D 408 | | M | Spring | A- 157-WC | NU3009-1 |
| D 408 | | M | Pin | A- 157-PK | NU3009-2 |
| D 409 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 410 I | | M | Wear Sensor | A- 345-S | NU3005 |
| D 411 O | | M | Hold Down | NU 3045 | |
| D 412 OR OE | | M | Piston Clip | NU 3012-1 | |
| D 412 IR | | M | Piston Clip | NU 3012-1 | |
| D 412 OL | | M | Piston Clip | NU 3012-1 | |
| D 412 OL OE | | M | Piston Clip | NU 3012-1 | |
| D 412 OR | | M | Piston Clip | NU 3012-1 | |
| D 412 IR OE | | M | Piston Clip | NU 3012-1 | |
| D 412 IL OE | | M | Piston Clip | NU 3012-1 | |
| D 412 IL | | M | Piston Clip | NU 3012-1 | |
| D 412 OL OE | | M | Washer | NU 3012-2 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|------------------------|-----------------|------------------|
| D 412 IR OE | | M | Washer | NU 3012-2 | |
| D 412 IR | | M | Washer | NU 3012-2 | |
| D 412 OR | | M | Washer | NU 3012-2 | |
| D 412 OL | | M | Washer | NU 3012-2 | |
| D 412 IL | | M | Washer | NU 3012-2 | |
| D 412 IL OE | | M | Washer | NU 3012-2 | |
| D 412 OR OE | | M | Washer | NU 3012-2 | |
| D 412 IL | | M | Anti-Rattle | NU 3028 | |
| D 412 OR OE | | M | Anti-Rattle | NU 3028 | |
| D 412 OR | | M | Anti-Rattle | NU 3028 | |
| D 412 OL OE | | M | Anti-Rattle | NU 3028 | |
| D 412 IR OE | | M | Anti-Rattle | NU 3028 | |
| D 412 IR | | M | Anti-Rattle | NU 3028 | |
| D 412 IL OE | | M | Anti-Rattle | NU 3028 | |
| D 412 OL | | M | Anti-Rattle | NU 3028 | |
| D 412 IR OE | | M | Wear Sensor | NU 3095 | |
| D 412 IL OE | | M | Wear Sensor | NU 3095 | |
| D 412 OR OE | | M | Wear Sensor | NU 3095 | |
| D 412 OL OE | | M | Wear Sensor | NU 3095 | |
| D 413 I | | M | Wear Sensor | NU 2130 | |
| D 413 I OE | | M | Wear Sensor | NU 2130 | |
| D 413 I OE | | B | Spring | A- 157-WC | NU3009-1 |
| D 413 O | | M | Spring | A- 157-WC | NU3009-1 |
| D 413 O OE | | B | Spring | A- 157-WC | NU3009-1 |
| D 413 I | | M | Spring | A- 157-WC | NU3009-1 |
| D 413 O OE | | B | Pin | A- 157-PK | NU3009-2 |
| D 413 I OE | | B | Pin | A- 157-PK | NU3009-2 |
| D 413 I | | M | Pin | A- 157-PK | NU3009-2 |
| D 413 O | | M | Pin | A- 157-PK | NU3009-2 |
| D 414 | | M | Piston Clip | NU 2034 | |
| D 414 | | M | Hold Down LH | NU 2124 | |
| D 414 | | M | Hold Down RH | NU 2125 | |
| D 415 OL | | B | Hold Down | A- 159-S | NU2095 |
| D 415 OR | | B | Hold Down | A- 159-S | NU2095 |
| D 415 IR | | B | Piston Clip | NU 2097 | |
| D 415 IL | | B | Piston Clip | NU 2097 | |
| D 416 | | R | Hold Down LH | NU 2124 | |
| D 416 | | R | Hold Down RH | NU 2125 | |
| D 416 I | | R | Piston Clip | A- 34-S | NU2176 |
| D 417 OR | | B | Hold Down RH | NU 2067 | |
| D 417 OL | | B | Hold Down LH | NU 2068 | |
| D 417 I | | B | Piston Clip | NU 2126 | |
| D 418 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 419 OT | | M | Spring Kit | A- 184-S Assy | |
| D 419 I | | M | Spring Kit | A- 184-S Assy | |
| D 421 I | | B | Piston Clip | NU 2066 | |
| D 421 OR | | B | Hold Down RH | NU 2067 | |
| D 421 OL | | B | Hold Down LH | NU 2068 | |
| D 421 I | | B | Piston Clip | NU 2126 | |
| D 422 I | | M | Wear Sensor | A- 537-S | NU3035 |
| D 423 | 018201 | M | Electronic Wear Sensor | W 2064101 | |
| D 423 | 018201 | M | Spring Kit | A- 184-S Assy | |
| D 424 | | M | Electronic Wear Sensor | W 2064001 | |
| D 425 | | M | Electronic Wear Sensor | W 2064001 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|----------------------|-----------------|------------------|
| D 428 I | | M | Wear Sensor | NU 3021 | |
| D 429 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 429 OT | | M | Hole Cover | NU 3010 | |
| D 430 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 431 OL | | B | Hold Down | A- 08-S | NU2008 |
| D 431 OR | | B | Hold Down | A- 08-S | NU2008 |
| D 431 I | | B | Piston Clip | NU 2165 | |
| D 431 IOE | | R | Piston Clip | NU 2165 | |
| XD 435 | | M | Wear Sensor | A- 350-S | NU3001 |
| D 436 I | | M | Wear Sensor | A- 345-S | NU3005 |
| D 436 O | | M | Wear Sensor LH | A- 344-LH | NU3016-LH |
| D 436 O | | M | Wear Sensor RH | A- 343-RH | NU3016-RH |
| XD 437 | | M | Wear Sensor | A- 346-S | NU3000 |
| XD 437 OE | | M | Wear Sensor LH | NU 3043 | |
| XD 437 OE | | M | Wear Sensor RH | NU 3044 | |
| D 439 | | M | Spring Kit | A- 184-S Assy | |
| D 440 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 441 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 444 | | M | Piston Clip | NU 3011 | |
| D 448 O | | M | Wear Sensor | NU 3021 | |
| D 448 I | | M | Wear Sensor | NU 3021 | |
| D 449 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 451 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 452 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 456 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 456 I | | M | Piston Clip | NU 3019 | |
| D 456 O | | M | Anti-Rattle | A- 370-S | NU3020 |
| D 459 O | | B | Hold Down | A- 38-S | NU2038 |
| D 459 O OE | | B | Hold Down | A- 38-S | NU2038 |
| D 459 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 459 O OE | | M | Wear Sensor | A- 71-S | NU2071 |
| D 459 O OE | | R | Wear Sensor | NU 2091 | |
| D 459 O | | R | Wear Sensor | NU 2091 | |
| D 459 I | | B | Piston Clip | A- 94-S | NU2094 |
| D 459 O | | M | Wear Sensor | NU 2146 | |
| D 459 O OE | | M | Wear Sensor | NU 2146 | |
| D 459 I | | B | Piston Clip | A- 252-S | NU2197 |
| D 459 IOE | | M | Piston Clip | A- 252-S | NU2197 |
| D 460 I | | M | Wear Sensor | NU 3085 | |
| D 461 I | | M | Wear Sensor | NU 3007 | |
| D 462 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 464 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 465 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 466 I | | B | Wear Sensor | NU 3007 | |
| D 467 O | | M | Hold Down | NU 3090 | |
| D 469 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 470 | | M | Wear Sensor LH | NU 3043 | |
| D 470 | | M | Wear Sensor RH | NU 3044 | |
| D 471 I | | M | Wear Sensor | NU 3038 | |
| D 473 I | | M | Wear Sensor | NU 3007 | |
| D 474 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 475 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 477 OL | | B | Hold Down | A- 159-S | NU2095 |
| D 477 OR | | B | Hold Down | A- 159-S | NU2095 |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|------------------------|-----------------|------------------|
| D 477 IR | | B | Piston Clip | A- 34-S | NU2176 |
| D 477 IL | | B | Piston Clip | A- 34-S | NU2176 |
| D 478 O | | B | Hold Down LH | NU 2036 | |
| D 478 O | | B | Hold Down RH | NU 2037 | |
| D 478 O | | B | Wear Sensor RH | NU 2134 | |
| D 478 O | | B | Wear Sensor LH | NU 2135 | |
| D 478 I | | B | Piston Clip | A- 34-S | NU2176 |
| D 479 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 480 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 481 | | M | Socket | NU 3025-1 | |
| D 481 | | M | Spring | NU 3025-2 | |
| D 484 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 485 | | M | Wear Sensor | A- 537-S | NU3096 |
| D 487 | | M | Electronic Wear Sensor | W 2064101 | |
| D 487 | | M | Spring Kit | A- 184-S Assy | |
| D 490 | | M | Wear Sensor | NU 3038 | |
| D 492 | 022800 | M | Pin | NU 3027 | |
| D 493 | 021602 | M | Spring Kit | A- 184-S Assy | |
| D 496 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 497 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 498 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 499 OL | | B | Hold Down | A- 08-S | NU2008 |
| D 499 OR | | B | Hold Down | A- 08-S | NU2008 |
| D 499 I | | B | Piston Clip | NU 2028 | |
| D 499 I | | B | Piston Clip | NU 2170 | |
| XD 500 O | | M | Wear Sensor | NU 3056 | |
| XD 501 | | M | Wear Sensor | NU 3131 | |
| D 502 | | M | Wear Sensor RH | J- 612-RH | NU3065 |
| D 502 | | M | Wear Sensor LH | J- 611-LH | NU3066 |
| D 503 I | | M | Wear Sensor LH | J- 502-LH | NU3029 |
| D 503 I | | M | Wear Sensor RH | J- 503-R | NU3030 |
| D 504 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 505 O | | B | Hold Down | A- 38-S | NU2038 |
| D 505 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 505 O | | R | Wear Sensor | NU 2091 | |
| D 505 O | | M | Wear Sensor | NU 2146 | |
| D 505 I | | B | Piston Clip | NU 3023 | |
| D 506 O | | B | Hold Down | A- 38-S | NU2038 |
| D 506 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 506 O | | R | Wear Sensor | NU 2091 | |
| D 506 O | | M | Wear Sensor | NU 2146 | |
| D 506 I | | B | Piston Clip | A- 167-S | NU3024 |
| D 507 | | B | Wear Sensor | NU 3094 | |
| D 508 | | B | Wear Sensor | NU 3021 | |
| D 509 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 510 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 511 I | | M | Wear Sensor | J- 383-S | NU3073 |
| D 512 IR | | B | Piston Clip | NU 2097 | |
| D 512 IL | | B | Piston Clip | NU 2097 | |
| D 512 OL | | B | Hold Down | NU 3022 | |
| D 512 OR | | B | Hold Down | NU 3022 | |
| D 514 | | M | Wear Sensor | NU 3021 | |
| D 515 I | | M | Wear Sensor | J- 422-S | NU3015 |
| D 517 | | M | Hole Cover | NU 3010 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|------------------------|-----------------|------------------|
| D 517 B | | M | Piston Clip | NU 3037 | |
| D 517 | | M | Electronic Wear Sensor | W 2180802 | |
| D 521 O | | B | Wear Sensor | NU 2131 | |
| D 521 O | | B | Hold Down | NU 2140 | |
| D 522 O | | B | Wear Sensor | NU 2131 | |
| D 522 O | | B | Hold Down | NU 2140 | |
| D 523 O | | B | Wear Sensor | NU 2131 | |
| D 523 O | | B | Hold Down | NU 2140 | |
| D 524 O | | M | Wear Sensor | NU 2131 | |
| D 524 O | | M | Hold Down | NU 2140 | |
| D 526 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 526 I | | M | Wear Sensor | A- 537-S | NU3096 |
| XD 527 O | | M | Wear Sensor | NU 3056 | |
| D 528 O | | M | Wear Sensor | NU 3056 | |
| D 529 I | | B | Piston Clip | NU 2081 | |
| D 529 O | | B | Hold Down RH | A- 82-RH | NU2082 |
| D 529 O | | B | Hold Down LH | A- 83-LH | NU2083 |
| D 530 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 531 I | | M | Wear Sensor | NU 3085 | |
| D 532 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 534 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 536 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 537 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 538 I | | M | Piston Clip | NU 3031 | |
| D 538 O | | M | Hold Down | NU 3032 | |
| D 538 O | | M | Wear Sensor | NU 3033 | |
| XD 539 | | M | Wear Sensor | NU 3131 | |
| D 540 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 542 | 025200 | M | Spring Kit | A- 184-S Assy | |
| D 543 I OE | | M | Wear Sensor | NU 2014 | |
| D 543 I | | B | Wear Sensor | NU 2014 | |
| D 544 I | | B | Piston Clip | NU 2132 | |
| D 544 O | | B | Hold Down | NU 2133 | |
| D 545 B | | B | Spring | A- 157-WC | NU3009-1 |
| D 545 | | B | Spring | A- 157-WC | NU3009-1 |
| D 545 B | | B | Pin | A- 157-PK | NU3009-2 |
| D 545 | | B | Pin | A- 157-PK | NU3009-2 |
| D 545 B | | B | Rivet | NU 3040-2 | |
| D 545 | | B | Spring | A- 84-WIRE | NU3063-1 |
| D 545 | | B | Rivet | A- 85-PK | NU3063-2 |
| D 547 I | | M | Piston Clip | NU 3087 | |
| D 548 I | | M | Piston Clip | A- 391-S | NU3086 |
| D 549 I | | M | Wear Sensor | NU 3021 | |
| XD 552 I | | M | Wear Sensor | NU 3051 | |
| D 553 I | | M | Wear Sensor | J- 383-S | NU3073 |
| D 554 | | M | Wear Sensor | A- 346-S | NU3000 |
| D 555 I | | M | Piston Clip | A- 306-S | NU3054 |
| D 555 I | | M | Electronic Wear Sensor | W 1321801 | |
| D 556 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 557 O | | B | Hold Down | NU 3042 | |
| D 558 | | M | Hole Cover | NU 3010 | |
| D 558 B | | M | Piston Clip | NU 3011 | |
| D 559 IR | | B | Piston Clip | NU 2097 | |
| D 559 IL | | B | Piston Clip | NU 2097 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|------------------------|-----------------|------------------|
| D 559 IL/IR | | M | Piston Clip | A- 97-S | NU2210 |
| D 559 OR | | B | Hold Down | NU 3022 | |
| D 559 OL | | B | Hold Down | NU 3022 | |
| D 560 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 561 | 026800 | M | Electronic Wear Sensor | W 2064001 | |
| XD 562 IL | | M | Wear Sensor LH | NU 3043 | |
| XD 562 IR | | M | Wear Sensor RH | NU 3044 | |
| D 563 | | M | Wear Sensor LH | NU 3043 | |
| D 563 | | M | Wear Sensor RH | NU 3044 | |
| D 564 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 565 | | M | Spring | A- 157-WC | NU3009-1 |
| D 565 | | M | Pin | A- 157-PK | NU3009-2 |
| D 566 | | M | Wear Sensor | NU 3041 | |
| D 567 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 568 I | 030701 | M | Wear Sensor | A- 346-S | NU3000 |
| XD 570 | | M | Wear Sensor | NU 3131 | |
| XD 571 | | M | Wear Sensor RH | J- 570-L | NU3049 |
| XD 571 | | M | Wear Sensor LH | J- 571-R | NU3050 |
| XD 572 | | M | Wear Sensor RH | NU 3046 | |
| XD 572 | | M | Wear Sensor LH | NU 3047 | |
| D 574 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 576 I | | B | Piston Clip | NU 2066 | |
| D 576 OR | | B | Hold Down RH | NU 2067 | |
| D 576 OL | | B | Hold Down LH | NU 2068 | |
| D 576 I | | B | Wear Sensor | NU 2142 | |
| D 577 | 037601 | M | Electronic Wear Sensor | W 2064001 | |
| D 578 | | M | Electronic Wear Sensor | W 2064001 | |
| D 579 I | | M | Wear Sensor | NU 3058 | |
| D 580 I | | M | Wear Sensor | J- 383-S | NU3073 |
| D 581 | | M | Spring | NU 3061-1 | |
| D 581 | | M | Rivet | NU 3061-2 | |
| D 583 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 583 O | | M | Wear Sensor LH | NU 3070 | |
| D 583 O | | M | Wear Sensor RH | NU 3071 | |
| D 585 I OE | | M | Wear Sensor | NU 3060 | |
| D 585 I | | M | Wear Sensor | NU 3085 | |
| D 586 | | M | Spring | A- 157-WC | NU3009-1 |
| D 586 | | M | Pin | A- 157-PK | NU3009-2 |
| D 587 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 588 | | M | Wear Sensor | NU 3038 | |
| D 590 | | M | Spring Kit | A- 184-S Assy | |
| D 591 I | | B | Piston Clip | A- 177-S | NU2143 |
| D 591 O | | B | Hold Down | A- 178-S | NU2144 |
| D 593 | | B | Piston Clip | NU 2081 | |
| D 593 | | B | Hold Down RH | A- 82-RH | NU2082 |
| D 593 | | B | Hold Down LH | A- 83-LH | NU2083 |
| D 595 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 596 I | | M | Wear Sensor | J- 383-S | NU3038 |
| D 597 I OE | | M | Piston Clip | NU 2066 | |
| D 597 I | | B | Piston Clip | NU 2066 | |
| D 597 OR OE | | M | Hold Down RH | NU 2067 | |
| D 597 OR | | B | Hold Down RH | NU 2067 | |
| D 597 OL | | B | Hold Down LH | NU 2068 | |
| D 597 OL OE | | M | Hold Down LH | NU 2068 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|-------------------------|-----------------|------------------|
| D 597 I | | B | Piston Clip | NU 2126 | |
| D 597 I OE | | M | Piston Clip | NU 2126 | |
| D 598 | | B | Spring Kit | A- 184-S Assy | |
| D 599 | | B | Spring Kit | A- 184-S Assy | |
| D 601 | | B | Spring Kit | A- 184-S Assy | |
| D 603 | | M | Electronic Wear Sensor | W 2064001 | |
| D 607 O OE | | B | Hold Down | NU 2145 | |
| D 607 O | | B | Hold Down | NU 2145 | |
| D 610 | | B | Spring Kit | A- 184-S Assy | |
| D 611 I OE | | M | Wear Sensor | A- 345-S | NU3005 |
| D 611 I | | M | Wear Sensor | A- 345-S | NU3005 |
| D 611 O | | M | Wear Sensor RH | J- 612-RH | NU3065 |
| D 611 O | | M | Wear Sensor LH | J- 611-LH | NU3066 |
| D 614 O | | B | Wear Sensor | NU 2146 | |
| XD 615 O | | M | Wear Sensor | NU 3056 | |
| XD 616 O | | M | Wear Sensor | NU 3056 | |
| D 617 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 618 | | M | Hole Cover | NU 3010 | |
| D 618 B | | M | Piston Clip | NU 3076 | |
| XD 619 | | M | Wear Sensor RH | J- 570-L | NU3049 |
| XD 619 | | M | Wear Sensor LH | J- 571-R | NU3050 |
| D 621 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 623 O | | B | Hold Down | A- 38-S | NU2038 |
| D 623 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 623 O | | R | Wear Sensor | NU 2091 | |
| D 623 O | | M | Wear Sensor | NU 2146 | |
| D 623 I | | B | Piston Clip | NU 3023 | |
| D 625 | | B | Piston Clip Inner | NU 2150 | |
| D 625 | | B | Hold Down Outer | NU 2192 | |
| D 625 | | B | Wear Sensor | NU 3033 | |
| D 626 O | | B | Wear Sensor | NU 2147 | |
| D 626 O | | B | Hold Down | A- 189-S | NU2148 |
| D 627 | | B | Spring Kit | A- 184-S Assy | |
| D 628 I | | M | Wear Sensor | NU 2149 | |
| D 628 O | | M | Spring | A- 157-WC | NU3009-1 |
| D 628 I | | M | Spring | A- 157-WC | NU3009-1 |
| D 628 O | | M | Pin | A- 157-PK | NU3009-2 |
| D 628 I | | M | Pin | A- 157-PK | NU3009-2 |
| D 629 | | M | Wear Sensor LH | NU 3075 | |
| D 629 | | M | Wear Sensor RH | NU 3077 | |
| D 630 | | M | Wear Sensor LH | NU 3075 | |
| D 630 | | M | Wear Sensor RH | NU 3077 | |
| D 631 I | | M | Wear Sensor | NU 3085 | |
| D 632 O | | B | Wear Sensor | NU 2147 | |
| D 632 O | | B | Hold Down | A- 189-S | NU2148 |
| D 633 I | | B | Piston Clip | NU 2153 | |
| D 633 O | | B | Hold Down & Wear Sensor | NU 2154 | |
| D 634 | 025201 | M | Spring Kit | A- 184-S Assy | |
| D 634 | 025201 | M | Pin | NU 3079 | |
| D 636 | | M | Wear Sensor | NU 3078 | |
| D 637 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 638 | 031801 | M | Spring Kit | A- 184-KIT | NU3089 |
| D 640 I | | M | Piston Clip | NU 3138 | |
| D 641 | | B | Piston Clip | NU 2097 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|-------------------------|-----------------|------------------|
| D 641 | | M | Piston Clip | A- 97-S | NU2210 |
| D 641 O | | B | Hold Down | NU 3022 | |
| D 642 O | | B | Hold Down & Wear Sensor | A- 196-S | NU2151 |
| D 642 I | | B | Piston Clip | NU 2152 | |
| D 643 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 644 I | 031900 | M | Piston Clip | NU 3081 | |
| D 645 | 029900 | M | Electronic Wear Sensor | W 2064001 | |
| D 645 | 029900 | M | Rivet | NU 3040-2 | |
| D 645 | 029900 | M | Spring | NU 3082-1 | |
| D 647 | | M | Wear Sensor | A- 345-S | NU3005 |
| D 648 I | | B | Piston Clip | NU 2155 | |
| D 649 I | | M | Piston Clip | NU 3083 | |
| D 649 I | | M | Wear Sensor | NU 3126 | |
| D 649 IB | | M | Piston Clip | NU 3083 | |
| D 649 IB | | M | Wear Sensor | NU 3126 | |
| D 650 I | | B | Piston Clip | NU 2156 | |
| D 650 OL | | B | Wear Sensor LH | NU 2157 | |
| D 650 OR | | B | Hold Down | NU 2158 | |
| D 650 OL | | B | Hold Down | NU 2158 | |
| D 650 OR | | B | Wear Sensor RH | NU 2159 | |
| D 650 OL | | B | Hold Down | NU 2186 | |
| D 650 OR | | B | Hold Down | NU 2186 | |
| D 652 | | B | Wear Sensor | A- 220-M | NU3121 |
| XD 653 I | | M | Wear Sensor | A- 537-S | NU3096 |
| XD 653 IOE | | M | Wear Sensor | A- 537-S | NU3096 |
| D 654 O | | B | Hold Down | NU 2145 | |
| D 656 | | B | Spring Kit | A- 184-S Assy | |
| XD 657 O | | M | Wear Sensor | NU 3056 | |
| D 658 | | B | Piston Clip | NU 2097 | |
| D 658 | | M | Piston Clip | A- 97-S | NU2210 |
| D 658 | | B | Hold Down | NU 3022 | |
| D 662 O | | B | Hold Down | NU 2133 | |
| D 662 I | | B | Piston Clip | A- 179-S | NU2161 |
| D 664 OR | | B | Anti-Rattle RH | A- 226-RH | NU2162 |
| D 664 OL | | B | Anti-Rattle LH | A- 225-LH | NU2163 |
| D 664 IR | | B | Piston Clip | NU 2164 | |
| D 664 IL | | B | Piston Clip | NU 2164 | |
| D 664 OR | | B | Hold Down | NU 2192 | |
| D 664 OL | | B | Hold Down | NU 2192 | |
| D 666 IR | | B | Piston Clip | NU 2150 | |
| D 666 IL | | B | Piston Clip | NU 2150 | |
| D 666 OR | | B | Anti-Rattle RH | A- 226-RH | NU2162 |
| D 666 OL | | B | Anti-Rattle LH | A- 225-LH | NU2163 |
| D 666 OL | | B | Hold Down | NU 2192 | |
| D 666 OR | | B | Hold Down | NU 2192 | |
| D 666 IR | | B | Wear Sensor | NU 3033 | |
| D 666 IL | | B | Wear Sensor | NU 3033 | |
| D 667 IR | | B | Piston Clip | NU 2171 | |
| D 667 IL | | B | Piston Clip | NU 2171 | |
| D 667 OL | | B | Hold Down | NU 2192 | |
| D 667 OR | | B | Hold Down | NU 2192 | |
| D 667 IR | | B | Wear Sensor | NU 3033 | |
| D 667 IL | | B | Wear Sensor | NU 3033 | |
| XD 668 I | | M | Wear Sensor | A- 346-S | NU3000 |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|------------------------|-----------------|------------------|
| XD 668 O | | M | Wear Sensor | A- 522-S | NU3091 |
| D 669 I | | M | Wear Sensor | A- 537-S | NU3093 |
| D 670 O | | B | Wear Sensor | NU 2131 | |
| D 670 O | | B | Hold Down | NU 2140 | |
| XD 672 I | | M | Wear Sensor | NU 3092 | |
| D 673 O | | B | Hold Down | A- 38-S | NU2038 |
| D 673 O | | B | Wear Sensor | NU 2166 | |
| D 673 I | | B | Wear Sensor | NU 2166 | |
| D 673 I | | B | Piston Clip | A- 167-S | NU3024 |
| D 674 I | | M | Piston Clip | NU 2150 | |
| D 674 I | | M | Piston Clip | NU 2171 | |
| D 674 O | | M | Anti-Rattle | A- 233-S | NU2172 |
| D 674 O | | M | Hold Down | NU 2192 | |
| D 676 | 036700 | M | Spring Kit | A- 184-KIT | NU3089 |
| D 677 | 035600 | M | Wear Sensor | NU 3131 | |
| D 679 | | B | Wear Sensor | A- 220-M | NU3121 |
| D 684 | | M | Spring Kit | NU 3040 | |
| D 685 | | M | Wear Sensor RH | NU 3106 | |
| D 685 | | M | Wear Sensor LH | NU 3107 | |
| D 687 I | | M | Piston Clip | A- 483-S | NU3097 |
| D 688 I | | M | Piston Clip | NU 3088 | |
| D 688 IB | | M | Piston Clip | NU 3088 | |
| D 690 I | | R | Piston Clip | NU 2150 | |
| D 690 I | | R | Piston Clip | NU 2171 | |
| D 690 O | | R | Anti-Rattle | A- 233-S | NU2172 |
| D 690 O | | R | Hold Down | NU 2192 | |
| D 691 | | M | Wear Sensor | A- 296-RH | NU3100 |
| D 691 | | M | Wear Sensor | A- 295-LH | NU3104 |
| D 692 | | M | Electronic Wear Sensor | W 2264611 | |
| D 692 B | | M | Piston Clip | NU 3037 | |
| D 694 I | | M | Piston Clip | NU 3101 | |
| D 694 O | | M | Piston Clip | A- 432-S | NU3103 |
| D 695 IL | | M | Wear Sensor LH | NU 3043 | |
| D 695 IR | | M | Wear Sensor RH | NU 3044 | |
| D 696 | | M | Spring Kit | NU 3040 | |
| D 698 | | B | Wear Sensor | NU 3021 | |
| D 699 | | B | Wear Sensor | A- 232-M | NU2166-1 |
| XD 700 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 701 | | M | Wear Sensor LH | NU 3881-L | |
| D 701 | | M | Wear Sensor RH | NU 3881-R | |
| D 702 | | M | Wear Sensor | NU 2173 | |
| D 703 I | | M | Spring | NU 3061-1 | |
| D 703 I | | M | Rivet | NU 3061-2 | |
| D 703 O | | M | Rivet | A- 85-PK | NU3063-2 |
| D 703 O | | M | Anti-Rattle Spring | NU 3102 | |
| D 704 | | M | Spring Kit | NU 3040 | |
| D 706 | 038000 | B | Spring Kit | A- 184-S Assy | |
| D 708 | | B | Spring Kit | A- 184-S Assy | |
| D 710 I | 034803 | M | Electronic Wear Sensor | W 2064001 | |
| D 710 I | 034803 | M | Piston Clip | A- 266-S | NU3111 |
| D 711 IL | | B | Piston Clip | NU 2150 | |
| D 711 IR | | B | Piston Clip | NU 2150 | |
| D 711 OL | | B | Hold Down | NU 2192 | |
| D 711 OR | | B | Hold Down | NU 2192 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|-------------------------|-----------------|------------------|
| D 712 OL | | B | Hold Down | A- 159-S | NU2095 |
| D 712 OR | | B | Hold Down | A- 159-S | NU2095 |
| D 712 IL | | B | Piston Clip | A- 34-S | NU2176 |
| D 712 IR | | B | Piston Clip | A- 34-S | NU2176 |
| D 713 IL | | B | Piston Clip | NU 2150 | |
| D 713 IR | | B | Piston Clip | NU 2150 | |
| D 713 OL | | B | Anti-Rattle LH | A- 225-LH | NU2163 |
| D 713 OR | | B | Anti-Rattle RH | A- 226-RH | NU2162 |
| D 713 OR | | B | Hold Down | NU 2192 | |
| D 713 OL | | B | Hold Down | NU 2192 | |
| D 713 IL | | B | Wear Sensor | NU 3033 | |
| D 713 IR | | B | Wear Sensor | NU 3033 | |
| D 714 | | B | Wear Sensor | NU 3021 | |
| D 715 O | | B | Hold Down | NU 2133 | |
| D 715 I | | B | Piston Clip | A- 241-S | NU2178 |
| XD 716 O | | M | Wear Sensor | NU 3056 | |
| XD 716 I | | M | Wear Sensor | NU 3092 | |
| D 717 I | | M | Wear Sensor | A- 180-R | NU2204 |
| D 719 O | | B | Wear Sensor | NU 2131 | |
| D 719 O | | M | Wear Sensor | NU 3095 | |
| D 720 | | M | Spring Kit | A- 184-KIT | NU3089 |
| D 721 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 722 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 723 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 724 | | M | Spring | A- 157-WC | NU3009-1 |
| D 724 | | M | Pin | A- 157-PK | NU3009-2 |
| D 725 O | | M | Hole Cover | NU 3010 | |
| D 725 I | | M | Piston Clip | A- 389-S | NU3120 |
| D 726 | | M | Clip LH | NU 8001 | |
| D 726 | | M | Clip RH | NU 8002 | |
| D 727 I | | B | Wear Sensor | NU 2177 | |
| D 728 | | M | Wear Sensor | NU 3094 | |
| D 729 | | B | Wear Sensor | NU 2177 | |
| D 730 I | | B | Piston Clip | A- 177-S | NU2143 |
| D 730 O | | B | Hold Down & Wear Sensor | A- 196-S | NU2151 |
| D 731 | | B | Wear Sensor | NU 2179 | |
| D 732 | | M | Wear Sensor LH | A- 246-LH | NU2182 |
| D 732 | | M | Wear Sensor RH | A- 247-RH | NU2180 |
| D 733 I | | M | Wear Sensor | NU 3112 | |
| D 736 I | | M | Piston Clip | A- 266-S | NU3111 |
| D 740 I | | M | Piston Clip | A- 266-S | NU3111 |
| D 740 I | | M | Electronic Wear Sensor | W 2064001 | |
| D 742 | | M | Spring Kit | A- 184-KIT | NU3089 |
| D 743 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 745 I | | B | Piston Clip | NU 2155 | |
| D 746 I | | B | Piston Clip | NU 2183 | |
| D 746 O | | B | Hold Down RH | NU 2184 | |
| D 746 O | | B | Hold Down LH | NU 2185 | |
| D 747 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 749 | | M | Wear Sensor | NU 2179 | |
| D 750 I | | M | Wear Sensor LH | A- 246-LH | NU2182 |
| D 750 I | | M | Wear Sensor RH | A- 247-RH | NU2180 |
| D 751 O | | B | Hold Down | NU 2133 | |
| D 751 I | | B | Piston Clip | A- 241-S | NU2178 |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|-------------------------|-----------------|------------------|
| D 752 I | | B | Wear Sensor | NU 2177 | |
| D 753 O | | B | Wear Sensor | NU 2166 | |
| D 754 | | M | Wear Sensor | NU 3021 | |
| D 755 I | | M | Wear Sensor | NU 3117 | |
| D 759 | | M | Piston Clip | NU 2097 | |
| D 759 | | M | Piston Clip | A- 97-S | NU2210 |
| D 759 O | | M | Hold Down | NU 3022 | |
| D 760 I | | M | Piston Clip | NU 2066 | |
| D 760 OR | | M | Hold Down RH | NU 2067 | |
| D 760 OL | | M | Hold Down LH | NU 2068 | |
| D 761 IL/OR | | M | Hold Down | NU 2158 | |
| D 761 IR/OL | | M | Hold Down | NU 2158 | |
| D 761 IL/OR | | M | Anti-Rattle Outer RH | A- 226-RH | NU2162 |
| D 761 IR/OL | | M | Anti-Rattle Outer LH | A- 225-LH | NU2163 |
| D 761 IL/OR | | M | Piston Clip Inner | A- 228-S | NU3123 |
| D 761 IR/OL | | M | Piston Clip Inner | A- 228-S | NU3123 |
| D 762 | | M | Piston Clip Inner | NU 2155 | |
| D 763 I | | M | Piston Clip | A- 241-S | NU2178 |
| D 764 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 765 | | B | Spring Kit | A- 184-S Assy | |
| D 766 I | | M | Piston Clip | NU 3115 | |
| D 766 I | | M | Wear Sensor | NU 3116 | |
| D 767 I | | B | Wear Sensor | NU 2010 | |
| D 767 I | | B | Piston Clip | NU 2011 | |
| D 767 IF | | M | Piston Clip | NU 2031 | |
| D 767 I | | M | Anti-Flash Plate | NU 2174 | |
| D 767 I | | B | Rivet | NU 2009 | |
| D 767 IF | | B | Rivet | NU 2009 | |
| D 768 I | | M | Piston Clip | A- 432-S | NU3103 |
| D 768 I OE | | M | Piston Clip | A- 432-S | NU3103 |
| D 768 O | | M | Piston Clip | NU 3119 | |
| D 768 O OE | | M | Piston Clip | NU 3119 | |
| D 771 | | M | Wear Sensor | NU 3129 | |
| D 772 | | M | Wear Sensor | A- 373-S | NU3130 |
| D 774 I | | M | Wear Sensor | NU 3094 | |
| D 775 I | | M | Wear Sensor | NU 3038 | |
| D 778 I OE | | M | Piston Clip | NU 2155 | |
| D 778 | | M | Piston Clip | NU 2155 | |
| D 780 | | M | Spring Kit | NU 3040 | |
| D 780 OE | | M | Spring Kit | NU 3040 | |
| D 781 I | | M | Piston Clip | NU 3114 | |
| D 782 | | B | Piston Clip | NU 2097 | |
| D 782 | | M | Piston Clip | A- 97-S | NU2210 |
| D 782 | | B | Hold Down | NU 3022 | |
| D 783 I | | M | Piston Clip | A- 266-S | NU3111 |
| D 784 | | M | Wear Sensor | NU 2222 | |
| D 785 | | M | Wear Sensor | A- 261-M | NU2188 |
| D 787 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 789 O | | B | Hold Down | A- 38-S | NU2038 |
| D 789 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 789 O | | R | Wear Sensor | NU 2091 | |
| D 789 O | | M | Wear Sensor | NU 2146 | |
| D 789 I | | B | Piston Clip | NU 2191 | |
| D 790 I | | M | Piston Clip 2 per plate | A- 179-S | NU2161 |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|-------------------------|-----------------|------------------|
| D 790 O | | M | Wear Sensor LH | A- 259-RH | NU2189 |
| D 790 O | | M | Wear Sensor RH | A- 258-LH | NU2190 |
| D 791 I | | M | Piston Clip | A- 179-S | NU2161 |
| D 792 | | M | Wear Sensor | A- 262-M | NU2193 |
| D 794 I | | M | Piston Clip | NU 3139 | |
| D 795 I | | M | Piston Clip | NU 3118 | |
| D 796 I | 022500 | M | Piston Clip | NU 3083 | |
| D 799 | | M | Wear Sensor LH | A- 344-LH | NU3016-LH |
| D 799 | | M | Wear Sensor RH | A- 343-RH | NU3016-RH |
| D 800 I | | M | Piston Clip | A- 266-S | NU3111 |
| D 800 O | | M | Wear Sensor | A- 267-S | NU2194 |
| D 801 IOE | | M | Piston Clip | NU 2155 | |
| D 801 I | | B | Piston Clip | NU 2155 | |
| D 805 | | M | Hold Down | NU 2201 | |
| D 806 | | M | Spring Kit | A- 184-S Assy | |
| D 807 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 809 | | M | Hole Cover | NU 3010 | |
| D 809 | | M | Piston Clip | NU 3036 | |
| D 812 | | M | Wear Sensor | A- 373-S | NU3130 |
| D 812 | | M | Wear Sensor | NU 3772 | |
| D 813 I | | M | Wear Sensor | A- 270-S | NU3134 |
| D 814 | | B | Wear Sensor | NU 3021 | |
| D 815 | | M | Wear Sensor | A- 537-S | NU3096 |
| D 816 O | | M | Hold Down | NU 2198 KIT | |
| D 816 I | | M | Piston Clip | A- 264-S | NU2200 |
| D 818 | | M | Wear Sensor | NU 2146 | |
| D 819 O | | M | Wear Sensor | A- 267-S | NU2194 |
| D 819 I | | M | Piston Clip | A- 266-S | NU3111 |
| D 820 I | | B | Piston Clip | NU 2183 | |
| D 820 O | | B | Hold Down | NU 2202 | |
| D 822 I | | M | Wear Sensor | NU 3126 | |
| D 823 I | | M | Wear Sensor | NU 3127 | |
| D 825 | | M | Wear Sensor | NU 2203 | |
| D 826 | | M | Wear Sensor | NU 2203 | |
| D 827 | | M | Wear Sensor | NU 2203 | |
| D 828 | | M | Wear Sensor | NU 3834 | |
| D 829 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 829 I | | M | Wear Sensor | A- 346-S/494-S | NU3128 |
| D 830 | | M | Wear Sensor | A- 537-S | NU3096 |
| D 831 IR | | M | Wear Sensor | NU 3126 | |
| D 831 IL | | M | Wear Sensor | NU 3126 | |
| D 832 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 832 O | | M | Hold Down & Anti-Rattle | NU 3135 | |
| D 834 | | M | Wear Sensor | A- 262-M | NU2193 |
| D 836 I | | M | Piston Clip | NU 3132 | |
| D 836 I | | M | Piston Clip | NU 3133 | |
| D 837 | | M | Spring Kit | NU 3040 | |
| D 838 | | M | Spring Kit | A- 184-S Assy | |
| D 840 I | | M | Piston Clip | NU 3132 | |
| D 840 I | | M | Piston Clip | NU 3133 | |
| D 841 | | M | Wear Sensor | A- 293-S | NU2206 |
| D 843 I | | M | Piston Clip | A- 288-S | NU2209 |
| D 843 IOE | | M | Piston Clip | A- 288-S | NU2209 |
| D 845 O | | B | Hold Down | A- 38-S | NU2038 |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|------------------------|-----------------|------------------|
| D 845 O | | B | Hold Down | A- 38-S | NU2038 |
| D 845 O | | M | Wear Sensor | A- 71-S | NU2071 |
| D 845 O | | R | Wear Sensor | NU 2091 | |
| D 845 O | | R | Wear Sensor | NU 2091 | |
| D 845 I | | B | Piston Clip | NU 2196 | |
| D 846 I | | M | Wear Sensor | NU 3126 | |
| D 847 | 051800 | M | Electronic Wear Sensor | W 2416601 | |
| D 848 | | M | Electronic Wear Sensor | W 2416601 | |
| D 849 | | M | Hold Down | NU 2201 | |
| D 850 O | | M | Wear Sensor | NU 2166 | |
| D 853 I | 038300 | M | Electronic Wear Sensor | W 2064001 | |
| D 853 I | 038300 | M | Piston Clip | A- 266-S | NU3111 |
| XD 855 | | M | Wear Sensor | A- 296-RH | NU3100 |
| XD 855 | | M | Wear Sensor | A- 295-LH | NU3104 |
| D 856 | | M | Wear Sensor | A- 298-S | NU3856 |
| D 857 I | | M | Piston Clip | NU 2211 | |
| D 857 O | | M | Wear Sensor | A- 299-S | NU3857 |
| D 858 I | | M | Piston Clip | A- 241-S | NU2178 |
| D 858 O | | M | Hold Down LH | A- 170-S | NU2212 |
| D 858 O | | M | Hold Down RH | A- 302-S | NU2213 |
| D 859 | | M | Wear Sensor | NU 2173 | |
| D 863 I | | M | Wear Sensor | A- 270-S | NU3134 |
| D 864 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 865 I | | M | Wear Sensor | NU 3038 | |
| D 866 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 868 I | | M | Wear Sensor | NU 3834 | |
| D 868 O | | M | Hold Down | A- 370-S | NU3020 |
| D 869 I | | M | Piston Clip | A- 288-S | NU2209 |
| D 869 O | | M | Wear Sensor | NU 2214 | |
| D 872 I | 046100 | M | Electronic Wear Sensor | W 2416601 | |
| D 873 | | M | Electronic Wear Sensor | W 2416601 | |
| D 874 | 051900 | M | Electronic Wear Sensor | W 2064005 | |
| D 875 IR/OL | | M | Hold Down | NU 2158 | |
| D 875 OR | | M | Hold Down | NU 2158 | |
| D 875 OR | | M | Anti-Rattle RH | A- 226-RH | NU2162 |
| D 875 IR/OL | | M | Anti-Rattle Outer LH | A- 225-LH | NU2163 |
| D 875 IL | | M | Piston Clip | A- 228-S | NU3123 |
| D 875 IR/OL | | M | Piston Clip Inner | A- 228-S | NU3123 |
| D 876 | | M | Electronic Wear Sensor | W 2064001 | |
| D 878 | | M | Spring Kit | A- 184-S Assy | |
| D 879 IL/OR | | B | Piston Clip Inner | NU 2150 | |
| D 879 IR/OL | | B | Piston Clip Inner | NU 2150 | |
| D 879 IL/OR | | B | Hold Down Outer | NU 2192 | |
| D 879 IR/OL | | B | Hold Down Outer | NU 2192 | |
| D 881 IL/OR | | B | Piston Clip Inner | NU 2150 | |
| D 881 IR/OL | | B | Piston Clip Inner | NU 2150 | |
| D 881 IR/OL | | M | Hold down Outer | NU 2192 | |
| D 881 IL/OR | | M | Hold down Outer | NU 2192 | |
| D 882 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 883 | | M | Wear Sensor | A- 327-S | NU3141 |
| D 884 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 886 | | M | Spring Kit | A- 184-S Assy | |
| D 887 I | | M | Wear Sensor | J- 422-S | NU3015 |
| D 888 | | M | Wear Sensor | J- 422-S | NU3015 |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|------------------------|-----------------|------------------|
| D 888 | | M | Wear Sensor | A- 537-S | NU3096 |
| D 889 I | | M | Wear Sensor | NU 3145 | |
| D 891 | | M | Wear Sensor | NU 3078 | |
| D 893 I | | M | Wear Sensor | NU 3144 | |
| D 897 | | M | Wear Sensor | A- 331-S | NU2138 |
| D 898 | | M | Wear Sensor | A- 331-S | NU2138 |
| D 899 | | M | Electronic Wear Sensor | W 1251301 | |
| D 900 I | | M | Wear Sensor | J- 509-S | NU3146 |
| D 903 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 905 I | | M | Wear Sensor | NU 3038 | |
| D 906 | | M | Wear Sensor | A- 8405-S | |
| D 908 | | M | Wear Sensor | NU 3131 | |
| D 909 | | M | Wear Sensor | NU 2222 | |
| D 913 | | M | Wear Sensor | A- 340-S | NU2223 |
| D 914 I | | M | Wear Sensor | NU 3147 | |
| D 915 I | | M | Piston Clip | NU 3125 | |
| D 915 I | | M | Electronic Wear Sensor | W 1320101 | |
| D 916 | | M | Electronic Wear Sensor | W 2452808 | |
| D 918 I | 057302 | M | Piston Clip | NU 3125 | |
| D 918 O | 057300 | M | Hold Down | NU 3148 | |
| D 919 I | | M | Piston Clip | NU 3152 | |
| D 920 | | M | Electronic Wear Sensor | W 2264614 | |
| D 923 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 924 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 927 | 019600 | M | Electronic Wear Sensor | W 2064005 | |
| D 928 | 040700 | M | Electronic Wear Sensor | W 2065004 | |
| D 929 I | | M | Wear Sensor | J- 509-S | NU3869 |
| D 932 I | | M | Piston Clip | NU 2150 | |
| D 932 O | | M | Hold Down | NU 2186 | |
| D 932 OR | | M | Anti-Rattle RH | NU 2224 | |
| D 932 OL | | M | Anti-Rattle LH | NU 2225 | |
| D 934 O | | M | Wear Sensor LH | NU 2226 | |
| D 934 O | | M | Wear Sensor RH | NU 2227 | |
| D 934 I | | M | Piston Clip | A- 361-ASSEMBLY | NU2228 |
| D 934 I | | M | Hold Down | A- 355-S | NU2229 |
| D 934 I | | M | Anti-Rattle | A- 8153-S | NU2230 |
| D 934 O | | M | Anti-Rattle | A- 8153-S | NU2230 |
| D 935 I | | M | Piston Clip | A- 361-ASSEMBLY | NU2228 |
| D 935 O | | M | Wear Sensor | A- 358-S | NU2231 |
| D 937 | | M | Wear Sensor | A- 293-S | NU2206 |
| D 939 I | | M | Piston Clip | NU 3150 | |
| D 940 I | | M | Spring Kit | NU 3153 | |
| D 941 I | | M | Wear Sensor | J- 422-S | NU3015 |
| D 943 I | | M | Wear Sensor | NU 3147 | |
| D 949 | 035300 | M | Electronic Wear Sensor | W 2065004 | |
| D 950 | 033900 | M | Electronic Wear Sensor | W 2065004 | |
| D 946 | 035801 | M | Electronic Wear Sensor | W 2264613 | |
| D 946 I | 035801 | M | Piston Clip | A- 266-S | NU3111 |
| D 952 IL/OR | | M | Piston Clip Inner | NU 2150 | |
| D 952 IL/OL | | M | Piston Clip Inner | NU 2150 | |
| D 952 IL/OR | | M | Hold Down Outer | NU 2192 | |
| D 952 IL/OL | | M | Hold Down Outer | NU 2192 | |
| D 954 I | | M | Wear Sensor | A- 270-S | NU3134 |
| D 955 I | | M | Wear Sensor | A- 537-S | NU3096 |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|-----------------------------|-----------------|------------------|
| D 956 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 958 I | | M | Wear Sensor | NU 3147 | |
| D 962 | | M | Wear Sensor | A- 378-S | NU2240 |
| D 963 OL | | M | Anti-Rattle LH | A- 382-RH | NU2234 |
| D 963 OR | | M | Anti-Rattle RH | A- 381-LH | NU2235 |
| D 963 OL | | M | Hold Down | A- 380-S | NU2236 |
| D 963 OR | | M | Hold Down | A- 380-S | NU2236 |
| D 963 I | | M | Piston Clip | NU 2237 | |
| D 964 I | | M | Piston Clip | NU 2150 | |
| D 964 O | | M | Hold Down | NU 2192 | |
| D 965 | | M | Wear Sensor | A- 331-S | NU2138 |
| D 969 I | | M | Anti-Rattle | A- 386-S | NU3160 |
| D 969 O | | M | Wear Sensor | NU 3804 | |
| D 970 I | 060000 | M | Piston Clip | A- 264-S | NU2200 |
| D 972 I | 058500 | M | Piston Clip | NU 3150 | |
| D 974 I & O | | M | Wear Sensor | A- 384-S | NU3809 |
| D 975 | | M | Wear Sensor | A- 262-M | NU2193 |
| D 976 I | | M | Wear Sensor LH | A- 406-RH | NU3163 |
| D 976 I | | M | Wear Sensor RH | A- 405-LH | NU3164 |
| D 977 | | M | Roller Pin 4 per plate | NU 3806 | |
| D 978 | | M | Electronic Wear Sensor | W 2380802 | |
| D 978 | | M | Roller Pin 2 per plate | NU 3818 | |
| D 979 I | | M | Piston Clip | A- 389-S | NU3120 |
| D 979 O | | M | Hold Down | NU 3162 | |
| D 980 I | | M | Piston Clip | A- 497-S | NU3174 |
| D 981 I | | M | Piston Clip | NU 2150 | |
| D 981 OL | | M | Hold Down | NU 2192 | |
| D 981 OR | | M | Hold Down | NU 2192 | |
| D 982 I | 045000 | M | Piston Clip | A- 266-S | NU3111 |
| D 982 I | 045000 | M | Electronic Wear Sensor | W 1321801 | |
| D 986 | | M | Electronic Wear Sensor | W 2416601 | |
| D 986 I | 059700 | M | Piston Clip | A- 241-S | NU2178 |
| D 987 | 055900 | M | Electronic Wear Sensor (FL) | W 2436301 | |
| D 987 | 055900 | M | Electronic Wear Sensor (FR) | W 2416601 | |
| D 989 | | M | Wear Sensor | NU 2242 | |
| D 990 IL | | M | Wear Sensor | NU 3126 | |
| D 990 IR | | M | Wear Sensor | NU 3126 | |
| D 995 I | | M | Wear Sensor | NU 3126 | |
| D 998 O | | M | Hold Down | A- 380-S | NU2236 |
| D 998 I | | M | Piston Clip | NU 2243 | |
| D 999 I | | M | Wear Sensor | A- 399-S | NU2241 |
| D 1000 | | M | Wear Sensor | A- 232-M | NU2166-1 |
| D 1001 | | M | Wear Sensor | A- 407-S | NU3805 |
| D 1002 | | M | Wear Sensor | NU 3078 | |
| D 1003 I | | M | Piston Clip | A- 389-S | NU3120 |
| D 1003 O | | M | Hold Down | NU 3162 | |
| D 1004 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 1005 I | | M | Wear Sensor | A- 284-S | NU3113 |
| D 1006 | 034000 | M | Piston Clip | A- 523-S | NU3186 |
| D 1006 | 034000 | M | Electronic Wear Sensor | W 2065004 | |
| D 1007 | | M | Electronic Wear Sensor | W 2380805 | |
| D 1007 | | M | Roller Pin 4 per plate | NU 3806 | |
| D 1008 I | | M | Wear Sensor | J- 509-S | NU3146 |
| D 1010 | | M | Wear Sensor | A- 517-S | NU3810 |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|-------------------------|-----------------|------------------|
| D 1012 OL | | M | Anti-Rattle LH | A- 382-RH | NU2234 |
| D 1012 OR | | M | Anti-Rattle RH | A- 381-LH | NU2235 |
| D 1012 OL | | M | Hold Down | A- 380-S | NU2236 |
| D 1012 OR | | M | Hold Down | A- 380-S | NU2236 |
| D 1012 I | | M | Piston Clip | A- 414-S | NU3803-1 |
| D 1012 I | | M | Piston Clip washer | A- 415-S | NU3803-2 |
| D 1013 I | | M | Wear Sensor | NU 3804 | |
| D 1014 | | M | Roller Pin 4 per plate | NU 3806 | |
| D 1015 I | | M | Wear Sensor | NU 3808 | |
| D 1019 | | M | Wear Sensor | A- 409-S | NU2290 |
| D 1020 | | M | Wear Sensor | A- 417-S | NU2249 |
| D 1023 | | M | Spring Kit | A- 184-S Assy | |
| D 1024 I | 074200 | M | Piston Clip 2 per plate | NU 3178-KIT | |
| D 1024 O | 074300 | M | Hold Down | NU 3179 | |
| D 1028 | | M | Wear Sensor | A- 371-S | NU3811 |
| D 1031 I | | M | Wear Sensor | A- 537-S | NU3814 |
| D 1032 | | M | Wear Sensor | NU 3815 | |
| D 1033 I | | M | Wear Sensor | A- 419-S | NU3812 |
| D 1033 O | | M | Wear Sensor | A- 419-S | NU3812 |
| D 1035 I | | M | Wear Sensor | A- 537-S | NU3814 |
| D 1037 I | | M | Wear Sensor | NU 3834 | |
| D 1037 O | | M | Hold Down | A- 370-S | NU3020 |
| D 1039 | | M | Wear Sensor | A- 362-S | NU3824 |
| D 1040 I | | M | Piston Clip | NU 2150 | |
| D 1040 OL | | M | Hold Down | NU 2186 | |
| D 1040 OR | | M | Hold Down | NU 2186 | |
| D 1041 I | | M | Piston Clip | A- 475-S | NU3827 |
| D 1041 OL | | M | Hold Down LH | A- 380-S | NU2236 |
| D 1041 OR | | M | Hold Down RH | A- 380-S | NU2236 |
| D 1041 OL | | M | Wear Sensor LH | A- 427-S | NU3826 |
| D 1041 OR | | M | Wear Sensor RH | A- 427-S | NU3826 |
| D 1041 OL | | M | Anti-Rattle LH | NU 2225 | |
| D 1041 OR | | M | Anti-Rattle RH | NU 2224 | |
| D 1042 I | | M | Piston Clip | NU 3152 | |
| D 1044 I | | M | Piston Clip | A- 433-S | NU3831 |
| D 1047 I | | M | Piston Clip | A- 430-S | NU3833 |
| D 1049 | | M | Wear Sensor | A- 407-S | NU3805 |
| D 1050 | | M | Wear Sensor | A- 407-S | NU3805 |
| D 1051 I | | M | Wear Sensor | NU 3127 | |
| D 1052 | | M | Wear Sensor | NU 3131 | |
| D 1053 | | M | Wear Sensor | A- 407-S | NU3805 |
| D 1054 | | M | Wear Sensor | NU 2173 | |
| D 1055 I | | M | Piston Clip | NU 3835 | |
| D 1055 O | | M | Piston Clip | A- 432-S | NU3103 |
| D 1056 | | M | Wear Sensor 2 per plate | A- 262-M | NU2193 |
| D 1057 | | M | Wear Sensor 2 per plate | NU 3839 | |
| D 1058 | | M | Wear Sensor 2 per plate | NU 3840 | |
| D 1060 I | | M | Spring Kit | NU 3153 | |
| D 1063 I | | M | Wear Sensor | NU 3808 | |
| D 1064 | | M | Wear Sensor | A- 517-S | NU3810 |
| D 1065 | | M | Hold Down 2 per plate | NU 2201 | |
| D 1072 | | M | Electronic Wear Sensor | W 2064101 | |
| D 1073 I | | M | Wear Sensor | A- 453-S | NU3821 |
| D 1074 I | | M | Wear Sensor | A- 537-S | NU3096 |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|--------------|---------------------|---------------------------------|-------------------------|-----------------|------------------|
| D 1075 | | M | Wear Sensor | A- 362-S | NU3824 |
| D 1076 | | M | Wear Sensor | A- 435-S | NU3838 |
| D 1077 | | M | Wear Sensor | A- 331-S | NU3813 |
| D 1078 I | | M | Anti-Rattle LH | NU 3196-L | |
| D 1078 I | | M | Anti-Rattle RH | NU 3197-R | |
| D 1078 O | | M | Anti-Rattle | NU 3195 | |
| D 1080 I | | M | Wear Sensor | A- 440-S | NU3822 |
| D 1081 | | M | Spring | A- 441-S | NU3847 |
| D 1082 | | M | Spring Kit | A- 184-S Assy | |
| D 1085 | | M | Wear Sensor | A- 331-S | NU3813 |
| D 1086 I | | M | Wear Sensor | A- 350-S | NU3001 |
| D 1086 I | | M | Piston Clip | A- 505-S | NU3853 |
| D 1087 I | | M | Piston Clip | NU 3862 | |
| D 1087 O | | M | Hold Down | A- 380-S | NU2236 |
| D 1087 O | | M | Anti-Rattle RH | NU 2224 | |
| D 1087 O | | M | Anti-Rattle LH | NU 2225 | |
| D 1088 I | | M | Wear Sensor | A- 449-S | NU3854 |
| D 1089 I | | M | Wear Sensor LH | A- 442-LH | NU3855-LH |
| D 1089 I | | M | Wear Sensor RH | A- 443-RH | NU3855-RH |
| D 1090 I | | M | Wear Sensor | A- 449-S | NU3854 |
| D 1091 I | | M | Wear Sensor | NU 3860 | |
| D 1092 I | | M | Wear Sensor | A- 429-S | NU3858 |
| D 1093 I | | M | Wear Sensor | A- 444-S | NU3863 |
| XD 1094 | | M | Wear Sensor | A- 346-S | NU3864 |
| D 1097 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 1101 I | | M | Wear Sensor | A- 453-S | NU3866 |
| D 1102 I | | M | Wear Sensor | A- 399-S | NU2241 |
| D 1103 I | | M | Wear Sensor | A- 449-S | NU3854 |
| D 1104 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 1107 I | | M | Piston Clip | A- 264-S | NU2200 |
| D 1109 IL/OR | | M | Piston Clip | NU 2150 | |
| D 1109 IL/OR | | M | Hold Down | NU 2192 | |
| D 1109 IR/OL | | M | Piston Clip | NU 2150 | |
| D 1109 IR/OL | | M | Hold Down | NU 2192 | |
| D 1111 I | | M | Piston Clip | NU 3125 | |
| D 1111 I | | M | Electronic Wear Sensor | W 1321801 | |
| D 1111 O | | M | Hold Down | NU 3162 | |
| D 1112 | | M | Spring Kit | A- 184-S Assy | |
| D 1113 I | | M | Wear Sensor | NU 3868 | |
| D 1114 I | | M | Wear Sensor | A- 453-S | NU3866 |
| D 1115 I | | M | Piston Clip 2 per plate | NU 3118 | |
| D 1118 I | | M | Wear Sensor | NU 3870 | |
| D 1117 I | | M | Piston Clip 2 per plate | NU 3178-KIT | |
| D 1117 O | | M | Hold Down | NU 3179 | |
| D 1119 I | | M | Wear Sensor LH | A- 464-LH | NU3871-LH |
| D 1119 I | | M | Wear Sensor RH | A- 466-RH | NU3871-RH |
| D 1120 I | | M | Wear Sensor | A- 467-S | NU3872 |
| D 1123 I | | M | Electronic Wear Sensor | W 2416201 | |
| D 1124 I | | M | Wear Sensor | A- 453-S | NU3866 |
| D 1125 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 1130 | | M | Roller Pin 4 per plate | NU 3806 | |
| D 1136 | 068500 | M | Electronic Wear Sensor | W 2066202 | |
| D 1138 O | | M | Wear Sensor | A- 522-S | NU3091 |
| D 1139 I | | M | Piston Clip | NU 3088 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|--------------|---------------------|---------------------------------|-------------------------|-----------------|------------------|
| D 1140 I | | M | Piston Clip | NU 3115 | |
| D 1142 I | | M | Wear Sensor | A- 494-S | |
| D 1149 | | M | Wear Sensor | A- 407-S | NU3805 |
| D 1156 I | | M | Wear Sensor | A- 473-S | NU3873 |
| D 1157 I | | M | Wear Sensor | J- 383-S | NU3875 |
| D 1159 | | M | Wear Sensor | NU 3874 | |
| D 1160 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 1169 | | M | Wear Sensor | A- 440-S | NU3876 |
| D 1170 I | | M | Piston Clip | A- 497-S | NU3174 |
| D 1172 | | M | Wear Sensor | A- 399-S | NU2241 |
| D 1177 | | M | Electronic Wear Sensor | W 2065003 | |
| D 1180 | | M | Wear Sensor | NU 3877 | |
| D 1183 I | | M | Wear Sensor | NU 3808 | |
| D 1186 I | | M | Piston Clip | A- 264-S | NU2200 |
| D 1186 I | | M | Wear Sensor LH | NU 3043 | |
| D 1186 I | | M | Wear Sensor RH | NU 3044 | |
| XD 1192 I | | M | Wear Sensor | A- 482-S | NU3878 |
| D 1194 I | | M | Wear Sensor | A- 262-M | NU2193 |
| D 1195 I | | M | Wear Sensor | NU 3879 | |
| D 1202 I | | M | Wear Sensor | A- 488-S | NU3880 |
| D 1203 W | | M | Spring | A- 567-S | |
| D 1223 | | M | Electronic Wear Sensor | W 2414602 | |
| D 1224 | | M | Wear Sensor | NU 2146 | |
| D 1224 | | M | Wear Sensor | NU 2166 | |
| D 1226 I | | M | Electronic Wear Sensor | W 2276106 | |
| D 1226 O | | M | Electronic Wear Sensor | W 2276106 | |
| D 1229 | | M | Electronic Wear Sensor | W 2066202 | |
| D 1230 I | | M | Piston Clip | A- 433-S | NU3831 |
| D 1231 | 060700 | M | Electronic Wear Sensor | W 2416601 | |
| D 1249 IL | | M | Wear Sensor | NU 3126 | |
| D 1249 IR | | M | Wear Sensor | NU 3126 | |
| D 1250 | | M | Electronic Wear Sensor | W 2064003 | |
| D 1252 I | | M | Wear Sensor | NU 3850 | |
| D 1262 I | | M | Wear Sensor | A- 293-S | NU2206 |
| D 1264 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 1267 I | 078300 | M | Electronic Wear Sensor | W 2276106 | |
| D 1268 I | | M | Electronic Wear Sensor | W 2416201 | |
| D 1268 I | | M | Electronic Wear Sensor | W 2416203 | |
| D 1270 I | | M | Wear Sensor | A- 407-S | NU3805 |
| D 1271 I | | M | Electronic Wear Sensor | W 2416201 | |
| D 1272 I | 078500 | M | Electronic Wear Sensor | W 2416201 | |
| D 1273 I | | M | Wear Sensor | A- 293-S | NU2206 |
| D 1274 I | | M | Wear Sensor LH | NU 3845-L | |
| D 1274 I | | M | Wear Sensor RH | NU 3845-R | |
| D 1275 I | | M | Wear Sensor | A- 473-S | NU3859 |
| D 1276 I | | M | Wear Sensor | A- 346-S | NU3000 |
| D 1278 I | | M | Piston Clip 2 per plate | NU 3887 | |
| D 1278 I | | M | Anti-Rattle LH | NU 3889-L | |
| D 1278 I | | M | Anti-Rattle RH | NU 3889-R | |
| D 1278 O | | M | Anti-Rattle LH | NU 3886-L | |
| D 1278 O | | M | Anti-Rattle RH | NU 3886-R | |
| D 1279 I | | M | Piston Clip | A- 433-S | NU3831 |
| D 1279 O | | M | Piston Clip | A- 432-S | NU3103 |
| D 1280 IL/OR | | M | Wear Sensor | NU 3888 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|--------------|---------------------|---------------------------------|-------------------------|-----------------|------------------|
| D 1280 IR/OL | | M | Wear Sensor | NU 3888 | |
| D 1281 I | | M | Wear Sensor | NU 3834 | |
| D 1284 I | | M | Wear Sensor | A- 473-S | NU3859 |
| D 1285 I | | M | Wear Sensor | A- 284-S | NU3113 |
| D 1286 I | | M | Wear Sensor | A- 499-S | NU3890 |
| D 1287 I | | M | Wear Sensor LH | NU 3845-L | |
| D 1287 I | | M | Wear Sensor RH | NU 3845-R | |
| D 1287 I | | M | Spring Clip 2 per plate | A- 500-S | NU3892 |
| D 1287 O | | M | Spring Clip 2 per plate | A- 500-S | NU3892 |
| D 1288 I | | M | Wear Sensor | NU 3891 | |
| D 1289 I | | M | Electronic Wear Sensor | W 2414602 | |
| D 1290 I | | M | Electronic Wear Sensor | W 2414602 | |
| D 1291 | | M | Electronic Wear Sensor | W 2414602 | |
| D 1292 | | M | Electronic Wear Sensor | W 2414602 | |
| D 1295 I | | M | Wear Sensor | A- 397-S | NU3893 |
| D 1296 I | | M | Wear Sensor | A- 504-S | NU3895 |
| D 1297 I | | M | Wear Sensor | NU 3894 | |
| D 1301 I | | M | Wear Sensor | A- 397-S | NU3893 |
| D 1302 I | | M | Wear Sensor | A- 397-S | NU3893 |
| D 1303 IL | | M | Wear Sensor | J- 611-LH | NU3899-LH |
| D 1303 IR | | M | Wear Sensor | J- 612-RH | NU3899-RH |
| D 1305 I | 064800 | M | Piston Clip | NU 3125 | |
| D 1306 I | 077100 | M | Piston Clip | NU 3897 | |
| D 1313 I | | M | Wear Sensor | NU 3896 | |
| D 1317 | 077500 | M | Electronic Wear Sensor | W 2416201 | |
| D 1319 I | | M | Piston Clip | A- 264-S | NU2200 |
| D 1320 | | M | Electronic Wear Sensor | W 2414602 | |
| D 1322 I | 080600 | M | Piston Clip | NU 3903-1 | |
| D 1322 I | 080600 | M | Washer | A- 519-W | NU3906-2 |
| D 1322 I | 080600 | M | Electronic Wear Sensor | W 2324301 | |
| D 1325 I | | M | Wear Sensor | NU 3834 | |
| D 1326 I | | M | Wear Sensor | A- 340-S | NU3898 |
| D 1327 I | | M | Wear Sensor | A- 293-S | NU2206 |
| D 1331 I | | M | Wear Sensor | A- 293-S | NU2206 |
| D 1332 I | | M | Wear Sensor | NU 3904 | |
| D 1335 I | | M | Wear Sensor | A- 517-S | NU3810 |
| D 1335 I | | M | Spring Clip 2 per plate | A- 441-S | NU3847 |
| D 1335 O | | M | Spring Clip 2 per plate | A- 441-S | NU3847 |
| D 1336 I | | M | Wear Sensor | A- 350-S | NU3900 |
| D 1337 I | | M | Wear Sensor | NU 3905 | |
| D 1338 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 1339 I | | M | Spring Clip 2 per plate | A- 507-S | NU3901 |
| D 1339 I | | M | Wear Sensor | A- 508-S | NU3902 |
| D 1339 O | | M | Spring Clip 2 per plate | A- 507-S | NU3901 |
| D 1340 | 079400 | M | Electronic Wear Sensor | W 2416601 | |
| D 1341 I | 079500 | M | Electronic Wear Sensor | W 2416601 | |
| D 1342 I | 081800 | M | Piston Clip | NU 3906-1 | |
| D 1342 I | 081800 | M | Washer | A- 519-W | NU3906-2 |
| D 1342 I | 081800 | M | Electronic Wear Sensor | W 2416601 | |
| D 1343 I | | M | Wear Sensor | NU 3834 | |
| D 1343 O | | M | Hold Down | A- 370-S | NU3020 |
| XD 1345 I | | M | Wear Sensor | NU 3891 | |
| D 1346 I | | M | Wear Sensor | NU 3907 | |
| D 1347 I | | M | Wear Sensor | NU 3907 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|---------------|---------------------|---------------------------------|-------------------------|-----------------|------------------|
| D 1349 I | 086300 | M | Electronic Wear Sensor | W 2380809 | |
| D 1351 I | | M | Wear Sensor | A- 417-S | NU2249 |
| D 1352 I | | M | Wear Sensor LH | A- 246-LH | NU2182 |
| D 1352 I | | M | Wear Sensor RH | A- 247-RH | NU2180 |
| D 1357 | 068600 | M | Electronic Wear Sensor | W 2416601 | |
| D 1359 I | | M | Piston Clip | NU 3125 | |
| D 1359 I | | M | Electronic Wear Sensor | W 1381802 | |
| D 1360 I | 071000 | M | Electronic Wear Sensor | W 1230103 | |
| D 1361 I | 062600 | M | Piston Clip | A- 266-S | NU3111 |
| D 1361 O | 062100 | M | Wear Sensor | NU 3909 | |
| D 1363 I | | M | Wear Sensor | A- 417-S | NU2249 |
| D 1364 I | | M | Wear Sensor | A- 419-S | NU3812 |
| D 1367 I | | M | Wear Sensor 2 per plate | A- 417-S | NU2249 |
| D 1371 | 084200 | M | Electronic Wear Sensor | W 2450807 | |
| D 1372 | 084300 | M | Electronic Wear Sensor | W 2276106 | |
| XD 1374 | | M | Wear Sensor | A- 284-S | NU3113 |
| D 1375 I | 077100 | M | Piston Clip | A- 433-S | NU3831 |
| D 1375 I | 077100 | M | Electronic Wear Sensor | W 1381801 | |
| XD 1378 IL/OR | | M | Wear Sensor | NU 3888 | |
| XD 1378 IR/OL | | M | Wear Sensor | NU 3888 | |
| D 1379 I | | M | Wear Sensor | A- 407-S | NU3805 |
| D 1380 I | | M | Wear Sensor 2 per plate | A- 429-S | NU3858 |
| D 1381 I | 085800 | M | Piston Clip | NU 3835 | |
| D 1384 I | | M | Wear Sensor | A- 488-S | NU3880 |
| D 1385 I | | M | Wear Sensor | A- 488-S | NU3880 |
| D 1387 I | | M | Wear Sensor | A- 473-S | NU3859 |
| D 1388 I | | M | Piston Clip | NU 3150 | |
| D 1393 I | | M | Wear Sensor | NU 3038 | |
| XD 1394 I | | M | Wear Sensor | A- 346-S | NU3864 |
| D 1397 I | | M | Wear Sensor | J- 383-S | NU3875 |
| D 1398 I | | M | Wear Sensor | A- 504-S | NU3895 |
| D 1399 I | | M | Wear Sensor | A- 529-S | NU3910 |
| D 1399 I | | M | Anti-Rattle 2 per plate | A- 528-S | NU3911 |
| D 1400 I | | M | Wear Sensor | A- 529-S | NU3910 |
| D 1400 I | | M | Anti-Rattle 2 per plate | A- 528-S | NU3911 |
| D 1401 I | | M | Wear Sensor | NU 3912 | |
| D 1402 I | | M | Wear Sensor | NU 3912 | |
| D 1404 I | | M | Wear Sensor | NU 3094 | |
| D 1406 I | 087400 | M | Electronic Wear Sensor | W 2416601 | |
| D 1407 | 903606 | M | Spring Clip | 23501 | |
| D 1408 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 1409 I | 089800 | M | Piston Clip | A- 389-S | |
| D 1410 I | 035800 | M | Piston Clip | A- 389-S | |
| D 1411 I-R | | M | Wear Sensor | NU 3915-RH | |
| D 1411 I-L | | M | Wear Sensor | NU 3915-LH | |
| D 1412 I | 086800 | M | Piston Clip 2 per plate | A- 497-S | NU3174 |
| D 1413 I | | M | Wear Sensor | A- 537-S | NU3096 |
| D 1415 I | | M | Wear Sensor | NU 3038 | |
| D 1418 I | | M | Wear Sensor | NU 3921 | |
| D 1419 L | | M | Wear Sensor | A- 556-LH | NU3924-LH |
| D 1419 R | | M | Wear Sensor | A- 557-RH | NU3924-RH |
| D 1421 I | | M | Wear Sensor | NU 3917 | |
| D 1422 I | | M | Wear Sensor | A- 553-S | NU3923 |
| D 1423 I | | M | Wear Sensor | NU 3913 | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|------------------------|-----------------|------------------|
| D 1428 | | M | Wear Sensor | NU 3158 | |
| D 1429 | 092700 | M | Electronic Wear Sensor | W 2468101 | |
| D 1430 | | M | Wear Sensor | A- 541-S | |
| D 1432 | | M | Wear Sensor | A- 494-S | |
| D 1432 | | M | Abutment Clip | A- 8390-S | |
| D 1433 | 095600 | M | Electronic Wear Sensor | W 2467902 | |
| D 1439 | | M | Wear Sensor | A- 473-S | NU3859 |
| D 1439 | | M | Abutment Clip | A- 8391-S | |
| D 1439 | | M | Wear Sensor | A- 473-S | |
| D 1442 | | M | Piston Clip | A- 241-S | NU2178 |
| D 1442 | | M | Piston Clip | A- 241-S | |
| D 1443 | 90000 | M | Piston Clip | A- 389-S | |
| D 1443 | 90000 | M | Outer Clip | NU 3148 | |
| D 1444 | | M | Wear Sensor | A- 537-S | |
| D 1444 | | M | Piston Clip | A- 8394-S | |
| D 1445 | | M | Wear Sensor | NU 3896 | |
| D 1445 | | M | Wear Sensor | A- 537-S | |
| D 1445 | | M | Abutment Clip | A- 8394-S | |
| D 1446 | | M | Wear Sensor | NU 3896 | |
| D 1446 | | M | Wear Sensor | A- 270-S | |
| D 1446 | | M | Abutment Clip | A- 8293-S | |
| D 1447 | | M | Wear Sensor | A- 559-S | |
| D 1447 | | M | Abutment Clip | A- 8284-S | |
| D 1448 | 089801 | M | Piston Clip | NU 3178-KIT | |
| D 1448 O | 091501 | M | Hold Down Clip | NU 3179 | |
| D 1451 | | M | Wear Sensor | A- 350-S | NU3900 |
| D 1451 | | M | Wear Sensor | A- 350-S | |
| D 1451 | | M | Abutment Clip | A- 8312-S | |
| D 1451 | | M | Spreader Spring | A- 8384-S | |
| D 1453 | 093400 | M | Electronic Wear Sensor | W 2380808 | |
| D 1454 | | M | Abutment Clip | A- 8347-S | |
| D 1455 O | | M | Wear Sensor | A- 561-S | |
| D 1455 | | M | Piston Clip | A- 364-S | |
| D 1455 | | M | Caliper Spring | A- 8396-S | |
| D 1456 | | M | Abutment Clip | A- 8229-S | |
| D 1456 | | M | Abutment Clip | A- 8230-S | |
| D 1463 | | M | Spring Clip | A- 441-S | NU3847 |
| D 1463 | | M | Wear Sensor | A- 560-S | |
| D 1463 | | M | Abutment Clip | A- 8233-S | |
| D 1463 | | M | Abutment Clip | A- 8234-S | |
| D 1463 | | M | Pad Return Clip | A- 441-S | |
| D 1464 | | M | Spring Clip | A- 441-S | NU3847 |
| D 1464 | | M | Wear Sensor | A- 560-S | |
| D 1464 | | M | Abutment Clip | A- 8233-S | |
| D 1464 | | M | Abutment Clip | A- 8234-S | |
| D 1464 | | M | Pad Return Clip | A- 441-S | |
| D 1465 | | M | Spring Kit | A- 184-S Assy | |
| D 1465 | | M | Wear Sensor | A- 560-S | |
| D 1465 | | M | Abutment Clip | A- 8235-S | |
| D 1467 | 088802 | M | Wear Sensor | A- 553-S | |
| D 1467 | 088802 | M | Abutment Clip | A- 8399-S | |
| D 1467 O | 088803 | M | Abutment Clip | A- 8399-S | |
| D 1468 | 089000 | M | Wear Sensor | A- 562-S | |
| D 1468 | 089000 | M | Abutment Clip | A- 8400-S | |



| FMSI Number | | | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|------|---|---------------------|---------------------------------|------------------------|------------------|------------------|
| D | 1468 | O | 089001 | M | Abutment Clip | A- 8400-S | |
| D | 1474 | I | | M | Wear Sensor | A- 407-S | NU3805 |
| D | 1474 | I | | M | Wear Sensor | A- 407-S | |
| D | 1476 | I | 039300 | M | Electronic Wear Sensor | W 1130018 | |
| D | 1480 | I | 023101 | M | Electronic Wear Sensor | W 1211401 | |
| D | 1485 | I | 025800 | M | Electronic Wear Sensor | W 1022902 | |
| D | 1488 | | 066100 | M | Abutment Clip | A- 8288-S | |
| D | 1488 | | 066100 | M | Abutment Clip | A- 8289-S | |
| D | 1489 | I | 078900 | M | Electronic Wear Sensor | W 1360003 | |
| D | 1497 | I | | M | Wear Sensor | A- 553-S | |
| D | 1498 | I | | M | Wear Sensor | A- 553-S | |
| D | 1498 | O | | M | Piston Clip | A- 364-S | |
| D | 1500 | | 053500 | M | Top Spring | A- 184-Kit-Rivet | |
| D | 1504 | I | 093600 | M | Piston Clip | A- 389-S | |
| D | 1505 | I | 093700 | M | Piston Clip | A- 389-S | |
| XD | 1506 | I | | M | Wear Sensor | A- 346-S | |
| XD | 1506 | I | | M | Abutment Clip | A- 8185-S | |
| XD | 1506 | O | | M | Spreader Spring | A- 8397-S | |
| D | 1507 | I | | M | Wear Sensor | A- 327-S | |
| D | 1507 | | | M | Abutment Clip | A- 8116-S | |
| D | 1508 | | | M | Abutment Clip | A- 8244-S | |
| D | 1508 | | | M | Spreader Spring | A- 8398-S | |
| XD | 1509 | | | M | Wear Sensor | A- 499-S | |
| XD | 1509 | | | M | Abutment Clip | A- 8282-S | |
| XD | 1509 | | | M | Spreader Spring | A- 8402-S | |
| D | 1510 | | | M | Wear Sensor | A- 537-S | |
| D | 1510 | | | M | Pad Return Clip | A- 563-S | |
| D | 1519 | I | 082100 | M | Wear Sensor | A- 537-S | |
| XD | 1521 | | | M | Wear Sensor | A- 442-LH | |
| XD | 1521 | | | M | Wear Sensor | A- 443-RH | |
| XD | 1521 | | | M | Wire Spring | A- 8401-S | |
| XD | 1521 | | | M | Abutment Clip | A- 8238-S | |
| D | 1522 | I | | M | Wear Sensor | A- 553-S | |
| D | 1522 | | | M | Abutment Clip | A- 8399-S | |
| D | 1529 | I | 090000 | M | Piston Clip | A- 389-S | |
| D | 1529 | I | 090000 | M | Electronic Wear Sensor | W 2468303 | |
| D | 1529 | O | 090101 | M | Outer Clip | NU 3148 | |
| D | 1534 | I | | M | Wear Sensor | NU 3126 | |
| D | 1534 | I | | M | Wear Sensor | A- 493-S | |
| D | 1535 | I | 077101 | M | Piston Clip | A- 433-S | |
| D | 1535 | I | 077101 | M | Electronic Wear Sensor | W 1321805 | |
| D | 1536 | I | 054001 | M | Electronic Wear Sensor | W 1360009 | |
| D | 1539 | | | M | Wear Sensor | A- 564-LH | |
| D | 1539 | | | M | Wear Sensor | A- 565-RH | |
| D | 1543 | I | | M | Wear Sensor | A- 494-S | |
| D | 1543 | | | M | Caliper Clip | A- 8404-S | |
| D | 1544 | I | | M | Wear Sensor | A- 270-S | |
| D | 1545 | | 034101 | M | Piston Clip | A- 536-S | |
| D | 1545 | | 034101 | M | Electronic Wear Sensor | W 2065003 | |
| D | 1546 | I | 093800 | M | Piston Clip | NU 3178-KIT | |
| D | 1546 | I | 093800 | M | Electronic Wear Sensor | W 2324302 | |
| D | 1546 | O | 093801 | M | Hold Down Clip | NU 3179 | |
| D | 1547 | I | 080801 | M | Electronic Wear Sensor | W 2324302 | |
| D | 1548 | I | | M | Wear Sensor | A- 449-S | |



| FMSI Number | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | Old NUCAP Number |
|-------------|---------------------|---------------------------------|------------------------|------------------|------------------|
| D 1549 | 093900 | M | Electronic Wear Sensor | W 2324302 | |
| D 1551 | | M | Wear Sensor | A- 569-S | |
| D 1551 | | M | Abutment Clip | A- 8410-S | |
| XD 1552 | | M | Wear Sensor | A- 295-LH | |
| XD 1552 | | M | Wear Senso | A- 296-RH | |
| XD 1552 | | M | Abutment Clip | A- 8249-S | |
| XD 1552 | | M | Spreader Spring | A- 8402-S | |
| D 1555 | 077800 | M | Electronic Wear Sensor | W 1492201 | |
| D 1555 | 077800 | M | Abutment Clip | A- 8288-S | |
| D 1555 | 077800 | M | Abutment Clip | A- 8289-S | |
| D 1557 | | M | Wear Sensor | A- 537-S | |
| D 1557 | | M | Abutment Clip | A- 8348-S | |
| D 1558 | 087700 | M | Wear Sensor | A- 541-S | |
| D 1558 | 087700 | M | Abutment Clip | A- 8345-S | |
| D 1559 | 087000 | M | Wear Sensor | A- 537-S | |
| D 1559 | 087000 | M | Abutment Clip | A- 8348-S | |
| D 1559 O | 087001 | M | Abutment Clip | A- 8348-S | |
| D 1561 | 096400 | M | Electronic Wear Sensor | W 2468303 | |
| D 1561 | 096400 | M | Piston Clip | A- 575-S | |
| D 1562 | | M | Wear Sensor | A- 560-S | |
| D 1562 O | | M | Top Spring | NU 3006-Kit | |
| D 1562 O | | M | Top Spring | A- 184-Kit-Rivet | |
| D 1562 | | M | Abutment Clip | A- 8235-S | |
| D 1563 | | M | Piston Clip | A- 433-S | |
| D 1563 | | M | Caliper Support Spring | A- 8414-S | |
| D 1564 | | M | Anti-Rattle Spring | A- 487-S | NU3207 |
| D 1564 | | M | Caliper Support Spring | A- 8413-S | |
| D 1565 | | M | Wear Sensor | NU 3915-LH | |
| D 1565 | | M | Wear Sensor | NU 3915-RH | |
| D 1565 | | M | Abutment Clip | A- 8263-S | |
| D 1565 | | M | Abutment Clip | A- 8264-S | |
| D 1567 | 094200 | M | Wear Sensor | A- 586-LH | |
| D 1567 | 094200 | M | Wear Sensor | A- 587-RH | |
| D 1568 | | M | Piston Clip | A- 264-S | |
| D 1568 O | | M | Wear Sensor | A- 357-LH | |
| D 1568 | | M | Caliper Support Spring | A- 8416-S | |
| D 1569 | | M | Wear Sensor | A- 529-S | |
| D 1569 | | M | Abutment Clip | A- 8415-S | |
| D 1571 | 079100 | M | Abutment Clip | A- 8288-S | |
| D 1571 | 079100 | M | Abutment Clip | A- 8289-S | |
| D 1571 | 079200 | M | Abutment Clip | A- 8288-S | |
| D 1571 | 079200 | M | Abutment Clip | A- 8289-S | |
| D 1572 | 082700 | M | Wear Sensor | A- 418-S | |
| D 1572 | 082700 | M | Abutment Clip | A- 8229-S | |
| D 1572 | 082700 | M | Abutment Clip | A- 8230-S | |
| D 1576 | | M | Wear Sensor | A- 576-LH | |
| D 1576 | | M | Wear Sensor | A- 577-RH | |
| D 1576 | | M | Abutment Clip | A- 8419-S | |
| XD 1578 | | M | Wear Sensor | A- 397-S | |
| XD 1578 | | M | Abutment Clip | A- 8373-S | |
| XD 1578 | | M | Spreader Spring | A- 8407-S | |
| D 1579 | | M | Electronic Wear Sensor | W 1212503 | |
| D 1579 | | M | Top Spring | 51026 | |
| D 1580 | | M | Electronic Wear Sensor | W 2064007 | |



| FMSI Number | | | NUCAP Europe Number | R⇒RIVETED M⇒MOLDED B⇒BOTH | Hardware Description | Hardware Number | | Old NUCAP Number |
|-------------|------|---|---------------------|---------------------------------|------------------------|-----------------|---------|------------------|
| D | 1581 | I | 077401 | M | Electronic Wear Sensor | | 9B818 | |
| D | 1582 | I | 056100 | M | Electronic Wear Sensor | W | 1130019 | |
| D | 1582 | I | 05610 | M | Electronic Wear Sensor | W | 1130020 | |
| D | 1583 | I | 906401 | M | Spring | M | 5900 | |
| XD | 1584 | I | | M | Wear Sensor | A- | 397-S | |
| XD | 1584 | | | M | Abutment Clip | A- | 8220-S | |
| XD | 1584 | | | M | Spreader Spring | A- | 8422-S | |
| XD | 1585 | I | | M | Wear Sensor | A- | 510-S | |
| XD | 1585 | | | M | Abutment Clip | A- | 8294-S | |
| XD | 1585 | | | M | Abutment Clip | A- | 8295-S | |
| XD | 1585 | | | M | Spreader Spring | A- | 8423-S | |
| D | 1586 | I | | M | Wear Sensor | NU | 3870 | |
| D | 1589 | I | | M | Wear Sensor | A- | 588-S | |
| D | 1589 | | | M | Abutment Clip | A- | 8417-S | |
| D | 1589 | | | M | Abutment Clip | A- | 8418-S | |
| NU | 4091 | I | | M | Wear Sensor | A- | 588-S | |
| NU | 4091 | | | M | Abutment Clip | A- | 8417-S | |
| NU | 4091 | | | M | Abutment Clip | A- | 8418-S | |
| NU | 4092 | I | | M | Wear Sensor | A- | 284-S | |
| NU | 4092 | | | M | Abutment Clip | | TBD | |
| NU | 4096 | I | | M | Wear Sensor | A- | 588-S | |
| NU | 4096 | | | M | Abutment Clip | A- | 8417-S | |
| NU | 4096 | | | M | Abutment Clip | A- | 8418-S | |
| | | | 033503 | M | Top Spring | A- | 184-Kit | |
| | | | 073502 | M | Anti-Rattle Spring | A- | 487-S | |
| | | I | 081300 | M | Piston Clip | A- | 369-S | |
| | | I | 081600 | M | Piston Clip | A- | 369-S | |
| | | I | 082101 | M | Wear Sensor | A- | 537-S | |
| | | I | 087801 | M | Piston Clip | A- | 264-S | |
| | | I | 087803 | M | Wear Sensor | A- | 294-S | |
| | | | 088000 | M | Top Spring | A- | 184-Kit | |
| | | I | 091600 | M | Piston Clip | A- | 369-S | |
| | | I | 091600 | M | Electronic Wear Sensor | W | 2210803 | |
| | | I | 096200 | M | Piston Clip | A- | 369-S | |
| | | I | 096200 | M | Electronic Wear Sensor | W | 2210803 | |
| | | I | 097600 | M | Wear Sensor | A- | 504-S | |