

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|----------------|---------|---------|----------------------|-----------------|
| D 52 I | M | R | Wear Sensor | NU 2010 |
| D 52 I | M | | Rivet | NU 2009 |
| D 52 IB | M | R | Wear Sensor | NU 2010 |
| D 52 IB | M | | Rivet | NU 2009 |
| D 52 IP | M | | Rivet | NU 2009 |
| D 52 IS | M | R | Wear Sensor | NU 2166 |
| D 52 I | M | | Anti-Flash Plate | NU 2195 |
| D 89 I | M | | Wear Sensor | NU 2014 |
| D 119 I Ver. 2 | | R | Wear Sensor | NU 2138 |
| D 134 | M | | Wear Sensor | NU 3072 |
| D 136 | M | | Socket | NU 3026 |
| D 139 I | M | R | Piston Clip | NU 2011 |
| D 139 I | M | | Wear Sensor | NU 2071 |
| D 139 I | | R | Wear Sensor | NU 2091 |
| D 139 I | M | | Anti-Flash Plate | NU 2169 |
| D 147 | M | | Spring | NU 3009-1 |
| D 147 | M | | Pin | NU 3009-2 |
| D 149 I | M | R | Wear Sensor | NU 2014 |
| D 149 IOE | M | | Wear Sensor | NU 2014 |
| D 150 I | M | R | Piston Clip | NU 2007 |
| D 150 OR | M | R | Hold Down | NU 2008 |
| D 150 OL | M | R | Hold Down | NU 2008 |
| D 151 OR | | R | Hold Down | NU 2000 |
| D 151 OL | | R | Hold Down | NU 2000 |
| D 151 OR | | R | Wear Sensor | NU 2002 |
| D 151 OL | | R | Wear Sensor | NU 2002 |
| D 151 I | | R | Piston Clip | NU 2005 |
| D 152 OR | M | R | Hold Down | NU 2000 |
| D 152 OL | M | R | Hold Down | NU 2000 |
| D 152 IL | | R | Piston Clip | NU 2001 |
| D 152 IR | | R | Piston Clip | NU 2001 |
| D 152 OL | M | R | Wear Sensor | NU 2002 |
| D 152 OR | M | R | Wear Sensor | NU 2002 |
| D 153 O | M | R | Wear Sensor | NU 2015 |
| D 154 IF | M | | Wear Sensor | NU 2010 |
| D 154 I | | R | Wear Sensor | NU 2010 |
| D 154 I | M | | Rivet | NU 2009 |
| D 154 IF | M | | Rivet | NU 2009 |
| D 154 IP | M | | Rivet | NU 2009 |
| D 154 IP | M | | Wear Sensor | NU 2010 |
| D 154 IP | M | | Piston Clip | NU 2011 |
| D 154 IB | M | | Piston Clip | NU 2011 |
| D 154 I | | R | Piston Clip | NU 2011 |
| D 154 IF | M | | Piston Clip | NU 2031 |
| D 154 I | M | | Plug | NU 2160 |
| D 154 I | M | | Anti-Flash Plate | NU 2174 |
| D 154 IB | M | | Anti-Flash Plate | NU 2174 |
| D 159 O | | R | Wear Sensor | NU 2010 |
| D 159 I | M | R | Piston Clip | NU 2011 |
| D 159 O | M | | Wear Sensor | NU 2025 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 159 O | M | | Rivet | NU 2009 |
| D 159 I | M | | Anti-Flash Plate | NU 2181 |
| D 160 | M | | Socket | NU 3026 |
| D 162 I | M | R | Piston Clip | NU 2011 |
| D 162 I | M | | Wear Sensor | NU 2071 |
| D 162 I | | R | Wear Sensor | NU 2091 |
| D 162 I | M | | Anti-Flash Plate | NU 2169 |
| D 170 | M | R | Piston Clip | NU 2019 |
| XD 178 | M | | Socket | NU 3026 |
| D 179 I | M | R | Piston Clip | NU 2020 |
| D 179 O | M | R | Hold Down | NU 2021 |
| D 181 OL | | R | Hold Down | NU 2000 |
| D 181 OR | | R | Hold Down | NU 2000 |
| D 181 IR | | R | Piston Clip | NU 2001 |
| D 181 IL | | R | Piston Clip | NU 2001 |
| D 181 OL | | R | Wear Sensor | NU 2002 |
| D 181 OR | | R | Wear Sensor | NU 2002 |
| D 182 OR | | R | Hold Down | NU 2000 |
| D 182 OL | | R | Hold Down | NU 2000 |
| D 182 OR | | R | Wear Sensor | NU 2002 |
| D 182 OL | | R | Wear Sensor | NU 2002 |
| D 182 I | | R | Piston Clip | NU 2005 |
| D 183 O | M | R | Wear Sensor | NU 2010 |
| D 183 O | M | | Rivet | NU 2009 |
| D 183 I | M | R | Piston Clip | NU 2011 |
| D 185 I | M | | Wear Sensor | NU 3008 |
| D 189 I | M | | Wear Sensor | NU 3008 |
| D 190 O | | R | Wear Sensor | NU 2010 |
| D 190 I | | R | Piston Clip | NU 2011 |
| D 190 OB | | R | Wear Sensor | NU 2137 |
| D 190 O | M | | Rivet | NU 2009 |
| D 190 OB | M | | Rivet | NU 2009 |
| D 191 I | M | R | Piston Clip | NU 2011 |
| D 191 I | M | | Wear Sensor | NU 2071 |
| D 191 I | | R | Wear Sensor | NU 2091 |
| D 191 I | M | | Anti-Flash Plate | NU 2169 |
| D 194 I | M | | Wear Sensor | NU 3008 |
| D 194 O | M | | Wear Sensor | RH NU 3109 |
| D 194 O | M | | Wear Sensor | LH NU 3110 |
| XD 195 | M | | Socket | NU 3026 |
| D 199 OL | M | R | Hold Down | NU 2008 |
| D 199 OR | M | R | Hold Down | NU 2008 |
| D 199 I | M | R | Piston Clip | NU 2028 |
| D 200 OL | M | R | Hold Down | NU 2008 |
| D 200 OL OE | | R | Hold Down | NU 2008 |
| D 200 OR | M | R | Hold Down | NU 2008 |
| D 200 OR OE | | R | Hold Down | NU 2008 |
| D 200 IOE | | R | Piston Clip | NU 2028 |
| D 200 I | M | R | Piston Clip | NU 2028 |
| D 200 OL | M | R | Wear Sensor | NU 2141 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|--------------|---------|---------|----------------------|-----------------|
| D 200 OL OE | | R | Wear Sensor | NU 2141 |
| D 200 OR OE | | R | Wear Sensor | NU 2141 |
| D 200 OR | M | R | Wear Sensor | NU 2141 |
| D 202 I | M | | Rivet | NU 2009 |
| D 202 IF | M | | Rivet | NU 2009 |
| D 202 IP | M | | Rivet | NU 2009 |
| D 202 IP | M | | Wear Sensor | NU 2010 |
| D 202 IF | M | | Wear Sensor | NU 2010 |
| D 202 I | | R | Wear Sensor | NU 2010 |
| D 202 IP | M | | Piston Clip | NU 2011 |
| D 202 I | | R | Piston Clip | NU 2011 |
| D 202 IF | M | | Piston Clip | NU 2031 |
| D 202 I | M | | Anti-Flash Plate | NU 2174 |
| D 204 O | | R | Wear Sensor | NU 2002 |
| D 205 O OE | | R | Hold Down | NU 2052 |
| D 205 O | M | R | Hold Down | NU 2052 |
| D 213 OT | M | | Hole Cover | NU 3010 |
| D 214 O | M | | Rivet | NU 2009 |
| D 214 OB | M | | Rivet | NU 2009 |
| D 214 O OE | M | | Rivet | NU 2009 |
| D 214 O | | R | Wear Sensor | NU 2010 |
| D 214 OS | M | | Wear Sensor | NU 2025 |
| D 214 O OE | M | | Wear Sensor | NU 2025 |
| D 214 OS OE | M | | Wear Sensor | NU 2025 |
| D 214 O | M | | Wear Sensor | NU 2025 |
| D 214 I | M | R | Piston Clip | NU 2031 |
| D 214 OB | | R | Wear Sensor | NU 2137 |
| D 215 O OE | M | | Wear Sensor | NU 2025 |
| D 215 O | M | | Wear Sensor | NU 2025 |
| D 215 O OE G | M | | Wear Sensor | NU 2025 |
| D 215 I GM | M | | Piston Clip | NU 2031 |
| D 215 I | M | R | Piston Clip | NU 2031 |
| D 215 O OE | M | | Hold Down | NU 2038 |
| D 215 O OE G | M | | Hold Down | NU 2038 |
| D 215 O | M | R | Hold Down | NU 2038 |
| D 215 O | | R | Wear Sensor | NU 2071 |
| D 215 O OE G | M | | Wear Sensor | NU 2136 |
| D 215 O OE | M | | Wear Sensor | NU 2136 |
| D 215 O | M | | Wear Sensor | NU 2136 |
| D 215 O | | R | Wear Sensor | NU 2137 |
| D 216 | M | | Spring | NU 3009-1 |
| D 216 | M | | Pin | NU 3009-2 |
| D 217 | M | | Spring | NU 3009-1 |
| D 217 | M | | Pin | NU 3009-2 |
| D 219 I | M | R | Spring | NU 2046 |
| D 219 I | M | R | Spring | NU 2047 |
| D 219 O | M | R | Spring | NU 2048 |
| D 219 O | M | R | Spring | NU 2049 |
| D 220 | M | R | Piston Clip | NU 2032 |
| D 221 I | M | R | Spring | NU 2046 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 221 I | M | R | Spring | NU 2047 |
| D 221 O | M | R | Spring | NU 2048 |
| D 221 O | M | R | Spring | NU 2049 |
| D 222 | M | R | Piston Clip | NU 2032 |
| D 226 | M | | Wear Sensor | NU 3072 |
| D 227 | M | | Spring Kit | NU 3040 |
| D 228 | M | | Spring | NU 3039-1 |
| D 228 | M | | Pin | NU 3039-2 |
| D 229 IL | M | | Wear Sensor | NU 3000 |
| D 229 IR | M | | Wear Sensor | NU 3000 |
| D 230 I | M | | Wear Sensor | NU 3000 |
| D 231 OT | M | | Hole Cover | NU 3010 |
| D 237 OL | M | R | Hold Down | NU 2000 |
| D 237 OR | M | R | Hold Down | NU 2000 |
| D 237 OL | M | R | Wear Sensor | NU 2002 |
| D 237 OR | M | R | Wear Sensor | NU 2002 |
| D 237 IR | M | R | Piston Clip | NU 2035 |
| D 237 IL | M | R | Piston Clip | NU 2035 |
| D 240 O | M | | Wear Sensor | NU 3053 |
| XD 242 | M | | Wear Sensor | NU 3131 |
| XD 242 | M | | Spring | NU K-242-43 |
| D 245 O | M | | Wear Sensor | NU 3056 |
| D 249 O | M | R | Hold Down | NU 2052 |
| D 249 O OE | M | R | Hold Down | NU 2052 |
| D 253 | M | | Hole Cover | NU 3010 |
| D 253 B | M | | Piston Clip | NU 3011 |
| D 255 | M | | Spring | NU 3009-1 |
| D 255 | M | | Pin | NU 3009-2 |
| D 256 I | M | | Wear Sensor | NU 3000 |
| D 257 I | M | R | Piston Clip | NU 2034 |
| D 257 O | M | R | Hold Down | LH NU 2036 |
| D 257 O | M | R | Hold Down | RH NU 2037 |
| D 259 I | M | R | Spring | NU 2046 |
| D 259 I | M | R | Spring | NU 2047 |
| D 259 O | M | R | Spring | NU 2050 |
| D 259 O | M | R | Spring | NU 2051 |
| D 260 | M | | Socket | NU 3026 |
| D 261 O OE | M | | Wear Sensor | NU 2025 |
| D 261 O | M | | Wear Sensor | NU 2025 |
| D 261 O OE | M | | Hold Down | NU 2038 |
| D 261 O | M | R | Hold Down | NU 2038 |
| D 261 I | M | R | Piston Clip | NU 2041 |
| D 261 O | | R | Wear Sensor | NU 2071 |
| D 261 O OE | M | | Wear Sensor | NU 2136 |
| D 261 O | M | | Wear Sensor | NU 2136 |
| D 261 O | | R | Wear Sensor | NU 2137 |
| D 262 O | M | | Wear Sensor | NU 2025 |
| D 262 O OE | M | | Wear Sensor | NU 2025 |
| D 262 O | M | R | Hold Down | NU 2038 |
| D 262 O OE | M | | Hold Down | NU 2038 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 262 O | | R | Wear Sensor | NU 2071 |
| D 262 O | M | | Wear Sensor | NU 2136 |
| D 262 O OE | M | | Wear Sensor | NU 2136 |
| D 262 O | | R | Wear Sensor | NU 2137 |
| D 263 O | M | | Wear Sensor | NU 3056 |
| D 264 I | M | | Piston Clip | NU 3011 |
| D 264 I | M | | Retainer | NU 3013 |
| D 264 O | M | | Hold Down | NU 3014 |
| D 264 I | M | | Wear Sensor | NU 3021 |
| D 266 I | M | | Wear Sensor | NU 3000 |
| D 272 I | M | | Wear Sensor | NU 3000 |
| D 273 I | M | | Wear Sensor | NU 3001 |
| D 274 I | M | | Wear Sensor | NU 3000 |
| D 275 I | M | | Wear Sensor | NU 3000 |
| D 276 I | M | | Wear Sensor | NU 3000 |
| D 277 I | M | | Wear Sensor | NU 3098 |
| D 277 I | M | | Wear Sensor | NU 3099 |
| D 278 | M | | Spring Kit | NU 3006 |
| D 279 | M | | Hole Cover | NU 3010 |
| D 279 B | M | | Piston Clip | NU 3036 |
| D 281 I | M | | Wear Sensor | NU 3000 |
| D 282 O | M | | Wear Sensor | NU 3004 |
| D 282 O | M | | Wear Sensor | NU 3055 |
| D 285 | M | | Wear Sensor | NU 3021 |
| D 289 O | | R | Wear Sensor | NU 2010 |
| D 289 OS OE | M | | Wear Sensor | NU 2025 |
| D 289 OS | M | | Wear Sensor | NU 2025 |
| D 289 O OE | M | | Wear Sensor | NU 2025 |
| D 289 O | M | | Wear Sensor | NU 2025 |
| D 289 I | M | R | Piston Clip | NU 2031 |
| D 289 I OE | M | | Piston Clip | NU 2031 |
| D 289 O | M | | Rivet | NU 2009 |
| D 289 OB | M | | Rivet | NU 2009 |
| D 289 O | M | | Wear Sensor | NU 2136 |
| D 289 OB | M | | Wear Sensor | NU 2136 |
| D 289 OB | | R | Wear Sensor | NU 2137 |
| D 290 | M | | Spring Kit | NU 3040 |
| D 291 O | M | | Wear Sensor | NU 3002 |
| D 291 I | M | | Wear Sensor | NU 3008 |
| D 293 I | M | | Wear Sensor | NU 3000 |
| D 294 I | M | | Wear Sensor | NU 2071 |
| D 294 I | | R | Wear Sensor | NU 2091 |
| D 294 O | M | R | Spring | NU 3009-1 |
| D 294 I | M | R | Spring | NU 3009-1 |
| D 294 I | M | R | Pin | NU 3009-2 |
| D 294 O | M | R | Pin | NU 3009-2 |
| D 295 I | M | | Wear Sensor | NU 2071 |
| D 295 I | | R | Wear Sensor | NU 2091 |
| D 295 I | M | R | Spring | NU 3009-1 |
| D 295 O | M | R | Spring | NU 3009-1 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 295 I | M | R | Pin | NU 3009-2 |
| D 295 O | M | R | Pin | NU 3009-2 |
| D 298 | M | | Hole Cover | NU 3010 |
| D 298 B | M | | Piston Clip | NU 3034 |
| D 300 | M | | Wear Sensor | NU 3001 |
| D 301 O | M | | Wear Sensor | NU 3052 |
| D 302 | M | | Wear Sensor | NU 3131 |
| D 306 | M | | Spring | NU 3039-1 |
| D 306 | M | | Pin | NU 3039-2 |
| D 308 I | M | | Wear Sensor | NU 3000 |
| D 309 O | M | | Wear Sensor | NU 3004 |
| D 309 O | M | | Wear Sensor | NU 3055 |
| D 310 OL | M | R | Hold Down | NU 2000 |
| D 310 OR | M | R | Hold Down | NU 2000 |
| D 310 OL | M | R | Wear Sensor | NU 2002 |
| D 310 OR | M | R | Wear Sensor | NU 2002 |
| D 310 IL | M | R | Piston Clip | NU 2035 |
| D 310 IR | M | R | Piston Clip | NU 2035 |
| D 311 | M | | Wear Sensor | NU 3021 |
| D 312 I | M | | Wear Sensor | NU 3000 |
| D 313 I | M | | Rivet | NU 2009 |
| D 313 IB | M | | Rivet | NU 2009 |
| D 313 IP | M | | Rivet | NU 2009 |
| D 313 IB | M | | Wear Sensor | NU 2010 |
| D 313 I | M | R | Wear Sensor | NU 2010 |
| D 313 I | M | | Plug | NU 2160 |
| D 313 IB | M | | Anti-Flash Plate | NU 2195 |
| D 313 IS | M | R | Wear Sensor | NU 2166 |
| D 313 I | M | | Anti-Flash Plate | NU 2195 |
| D 314 I | M | | Wear Sensor | NU 3000 |
| D 315 O | M | | Wear Sensor | NU 2071 |
| D 315 O | M | R | Hold Down | NU 2072 |
| D 315 I | M | R | Piston Clip | NU 2073 |
| D 315 O | | R | Wear Sensor | NU 2091 |
| D 316 O | M | | Wear Sensor | NU 2071 |
| D 316 O | M | R | Hold Down | NU 2072 |
| D 316 O | | R | Wear Sensor | NU 2091 |
| D 317 I | M | | Piston Clip | NU 3011 |
| D 317 I | M | | Retainer | NU 3013 |
| D 317 O | M | | Hold Down | NU 3014 |
| D 317 I | M | | Wear Sensor | NU 3021 |
| D 318 O | M | | Hold Down | NU 3059 |
| D 319 I | M | | Wear Sensor | NU 3007 |
| D 319 I | M | | Piston Clip | NU 3018 |
| D 320 I | M | | Wear Sensor | NU 3001 |
| D 321 | M | | Spring Kit | NU 3006 |
| D 322 | M | | Hole Cover | NU 3010 |
| D 322 B | M | | Piston Clip | NU 3036 |
| D 323 I | M | | Wear Sensor | NU 3000 |
| D 324 I | M | R | Piston Clip | NU 2066 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 324 OR | M | R | Hold Down RH | NU 2067 |
| D 324 OL | M | R | Hold Down LH | NU 2068 |
| D 325 | M | | Wear Sensor RH | NU 3106 |
| D 325 | M | | Wear Sensor LH | NU 3107 |
| D 326 O | M | R | Hold Down | NU 2052 |
| D 331 I | M | | Wear Sensor | NU 3085 |
| D 333 I | M | | Wear Sensor | NU 3000 |
| D 334 I | M | | Wear Sensor | NU 3000 |
| XD 336 | M | | Wear Sensor | NU 3001 |
| D 340 | M | | Spring Kit | NU 3006 |
| D 341 I | M | | Wear Sensor | NU 3001 |
| D 342 I | M | | Wear Sensor | NU 3001 |
| D 344 I | M | R | Piston Clip | NU 2081 |
| D 344 O | M | R | Hold Down RH | NU 2082 |
| D 344 O | M | R | Hold Down LH | NU 2083 |
| D 346 I | M | R | Piston Clip | NU 2007 |
| D 346 OL | M | R | Hold Down | NU 2008 |
| D 346 OR | M | R | Hold Down | NU 2008 |
| D 347 | M | R | Spring | NU 3009-1 |
| D 347 B | M | R | Spring | NU 3009-1 |
| D 347 | M | R | Pin | NU 3009-2 |
| D 347 B | M | R | Pin | NU 3009-2 |
| D 347 B | M | R | Rivet | NU 3040-2 |
| D 347 | M | R | Spring | NU 3063-1 |
| D 347 | M | R | Rivet | NU 3063-2 |
| D 348 I | M | | Piston Clip | NU 3011 |
| D 348 I | M | | Retainer | NU 3013 |
| D 348 O | M | | Plug | NU 3048 |
| D 348 I | M | | Wear Sensor | NU 3052 |
| D 349 I | M | | Wear Sensor | NU 3001 |
| D 350 | M | | Hole Cover | NU 3010 |
| D 350 B | M | | Piston Clip | NU 3062 |
| D 350 | M | | Pin | NU 3950 |
| D 352 | M | | Wear Sensor RH | NU 3106 |
| D 352 | M | | Wear Sensor LH | NU 3107 |
| D 353 O | M | | Wear Sensor | NU 2071 |
| D 353 O | M | R | Hold Down | NU 2072 |
| D 353 I | M | R | Piston Clip | NU 2073 |
| D 353 O | | R | Wear Sensor | NU 2091 |
| D 354 O | M | | Wear Sensor | NU 2071 |
| D 354 O | M | R | Hold Down | NU 2072 |
| D 354 O | | R | Wear Sensor | NU 2091 |
| D 355 O | M | | Wear Sensor | NU 3056 |
| XD 356 | M | | Wear Sensor | NU 3131 |
| XD 356 | M | | Spring | NU K-242-43 |
| D 357 I | M | | Wear Sensor | NU 3000 |
| D 358 I | M | | Wear Sensor | NU 3000 |
| D 358 I | M | | Spring Kit | NU 3006 |
| D 358 O | M | | Spring Kit | NU 3006 |
| D 359 | M | | Piston Clip | NU 3011 |



Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|------------------------|
| XD 361 O | M | | Hold Down | NU 3059 |
| D 362 | M | | Spring Kit | NU 3006 |
| D 363 | M | | Wear Sensor | NU 3021 |
| D 364 I | M | | Wear Sensor | NU 3001 |
| D 365 I | M | | Wear Sensor | NU 3001 |
| D 367 | M | R | Piston Clip | NU 2081 |
| D 367 | M | R | Hold Down | RH NU 2082 |
| D 367 | M | R | Hold Down | LH NU 2083 |
| D 368 O | M | R | Hold Down | NU 2038 |
| D 368 O | M | | Wear Sensor | NU 2071 |
| D 368 O | | R | Wear Sensor | NU 2091 |
| D 368 I | M | R | Piston Clip | NU 2094 |
| D 368 O | M | | Wear Sensor | NU 2146 |
| D 369 O | M | R | Hold Down | NU 2038 |
| D 369 O | M | | Wear Sensor | NU 2071 |
| D 369 O | | R | Wear Sensor | NU 2091 |
| D 369 I | M | R | Piston Clip | NU 2094 |
| D 369 O | M | | Wear Sensor | NU 2146 |
| D 370 O | M | R | Hold Down | NU 2038 |
| D 370 O | M | | Wear Sensor | NU 2071 |
| D 370 O | | R | Wear Sensor | NU 2091 |
| D 370 I | M | R | Piston Clip | NU 2094 |
| D 370 O | M | | Wear Sensor | NU 2146 |
| D 370 I | M | R | Piston Clip | NU 2196 |
| D 373 I | M | | Wear Sensor | NU 3001 |
| D 374 I | M | | Wear Sensor | NU 3001 |
| D 376 I | M | R | Piston Clip | 2 per plate NU 2087 |
| D 376 O | M | R | Hold Down | NU 2088 |
| D 376 O | M | | Wear Sensor | NU 2071 |
| D 376 O | | R | Wear Sensor | NU 2091 |
| D 377 I | M | | Wear Sensor | NU 2071 |
| D 377 I | | R | Wear Sensor | NU 2091 |
| D 377 O | M | R | Hold Down | NU 2090 |
| D 378 I | M | R | Wear Sensor | NU 2130 |
| D 381 L | M | R | Piston Clip | NU 2139 |
| D 382 | M | | Spring | NU 3009-1 |
| D 382 | M | | Pin | NU 3009-2 |
| D 383 I | M | | Wear Sensor | NU 3038 |
| D 385 O | M | R | Hold Down | LH NU 2036 |
| D 385 O | M | R | Hold Down | RH NU 2037 |
| D 385 I | M | R | Piston Clip | NU 2176 |
| D 387 O OE | | R | Hold Down | NU 2052 |
| D 387 O | M | R | Hold Down | NU 2052 |
| XD 388 O | M | | Wear Sensor | NU 3056 |
| D 390 | M | | Wear Sensor | NU 3038 |
| D 391 | M | | Spring | NU 3009-1 |
| D 391 | M | | Pin | NU 3009-2 |
| D 392 O | M | R | Wear Sensor | NU 2015 |
| D 394 | M | | Hole Cover | NU 3010 |
| D 394 B | M | | Piston Clip | NU 3034 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 395 | M | | Hole Cover | NU 3010 |
| D 395 B | M | | Piston Clip | NU 3011 |
| D 396 | M | | Hole Cover | NU 3010 |
| D 396 B | M | | Piston Clip | NU 3037 |
| XD 397 | M | | Wear Sensor | NU 3001 |
| D 398 | M | | Wear Sensor | NU 3021 |
| XD 399 | M | | Wear Sensor | NU 3021 |
| D 401 I | M | | Wear Sensor | NU 3000 |
| D 402 I | M | | Wear Sensor | NU 3007 |
| D 403 | M | | Hole Cover | NU 3010 |
| D 403 B | M | | Piston Clip | NU 3076 |
| D 405 | M | | Spring | NU 3009-1 |
| D 405 | M | | Pin | NU 3009-2 |
| D 406 | M | | Spring | NU 3009-1 |
| D 406 | M | | Pin | NU 3009-2 |
| D 407 | M | | Spring | NU 3009-1 |
| D 407 | M | | Pin | NU 3009-2 |
| D 408 | M | | Spring | NU 3009-1 |
| D 408 | M | | Pin | NU 3009-2 |
| D 409 I | M | | Wear Sensor | NU 3001 |
| D 410 I | M | | Wear Sensor | NU 3005 |
| D 411 O | M | | Hold Down | NU 3045 |
| D 412 IL | M | | Wear Sensor | NU 2130 |
| D 412 IR | M | | Wear Sensor | NU 2130 |
| D 412 OR OE | M | | Piston Clip | NU 3012-1 |
| D 412 IR | M | | Piston Clip | NU 3012-1 |
| D 412 OL | M | | Piston Clip | NU 3012-1 |
| D 412 OL OE | M | | Piston Clip | NU 3012-1 |
| D 412 OR | M | | Piston Clip | NU 3012-1 |
| D 412 IR OE | M | | Piston Clip | NU 3012-1 |
| D 412 IL OE | M | | Piston Clip | NU 3012-1 |
| D 412 IL | M | | Piston Clip | NU 3012-1 |
| D 412 OL OE | M | | Washer | NU 3012-2 |
| D 412 IR OE | M | | Washer | NU 3012-2 |
| D 412 IR | M | | Washer | NU 3012-2 |
| D 412 OR | M | | Washer | NU 3012-2 |
| D 412 OL | M | | Washer | NU 3012-2 |
| D 412 IL | M | | Washer | NU 3012-2 |
| D 412 IL OE | M | | Washer | NU 3012-2 |
| D 412 OR OE | M | | Washer | NU 3012-2 |
| D 412 IL | M | | Anti-Rattle | NU 3028 |
| D 412 OR OE | M | | Anti-Rattle | NU 3028 |
| D 412 OR | M | | Anti-Rattle | NU 3028 |
| D 412 OL OE | M | | Anti-Rattle | NU 3028 |
| D 412 IR OE | M | | Anti-Rattle | NU 3028 |
| D 412 IR | M | | Anti-Rattle | NU 3028 |
| D 412 IL OE | M | | Anti-Rattle | NU 3028 |
| D 412 OL | M | | Anti-Rattle | NU 3028 |
| D 412 IR OE | M | | Wear Sensor | NU 3095 |
| D 412 IL OE | M | | Wear Sensor | NU 3095 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 413 I | M | | Wear Sensor | NU 2130 |
| D 413 I | M | | Wear Sensor LH | NU 2167 |
| D 413 I | M | | Wear Sensor RH | NU 2168 |
| D 413 IOE | M | | Wear Sensor | NU 2130 |
| D 413 IOE | M | R | Wear Sensor LH | NU 2167 |
| D 413 IOE | M | R | Wear Sensor RH | NU 2168 |
| D 413 IOE | M | R | Spring | NU 3009-1 |
| D 413 O | M | | Spring | NU 3009-1 |
| D 413 OOE | M | R | Spring | NU 3009-1 |
| D 413 I | M | | Spring | NU 3009-1 |
| D 413 OOE | M | R | Pin | NU 3009-2 |
| D 413 IOE | M | R | Pin | NU 3009-2 |
| D 413 I | M | | Pin | NU 3009-2 |
| D 413 O | M | | Pin | NU 3009-2 |
| D 414 | M | | Piston Clip | NU 2034 |
| D 414 | M | | Hold Down LH | NU 2124 |
| D 414 | M | | Hold Down RH | NU 2125 |
| D 415 OL | M | R | Hold Down | NU 2095 |
| D 415 OR | M | R | Hold Down | NU 2095 |
| D 415 IR | M | R | Piston Clip | NU 2097 |
| D 415 IL | M | R | Piston Clip | NU 2097 |
| D 416 | | R | Hold Down LH | NU 2124 |
| D 416 | | R | Hold Down RH | NU 2125 |
| D 416 I | | R | Piston Clip | NU 2176 |
| D 417 OR | M | R | Hold Down RH | NU 2067 |
| D 417 OL | M | R | Hold Down LH | NU 2068 |
| D 417 I | M | R | Piston Clip | NU 2126 |
| D 418 I | M | | Wear Sensor | NU 3000 |
| D 419 OT | M | | Spring Kit | NU 3006 |
| D 419 I | M | | Spring Kit | NU 3006 |
| D 421 I | M | R | Piston Clip | NU 2066 |
| D 421 OR | M | R | Hold Down RH | NU 2067 |
| D 421 OL | M | R | Hold Down LH | NU 2068 |
| D 421 I | M | R | Piston Clip | NU 2126 |
| D 422 I | M | | Wear Sensor | NU 3035 |
| D 423 | M | | Spring Kit | NU 3006 |
| D 428 I | M | | Wear Sensor | NU 3021 |
| D 429 I | M | | Wear Sensor | NU 3000 |
| D 429 OT | M | | Hole Cover | NU 3010 |
| D 430 I | M | | Wear Sensor | NU 3096 |
| D 431 OL | M | R | Hold Down | NU 2008 |
| D 431 OR | M | R | Hold Down | NU 2008 |
| D 431 I | M | R | Piston Clip | NU 2165 |
| D 431 IOE | | R | Piston Clip | NU 2165 |
| XD 435 | M | | Wear Sensor | NU 3001 |
| D 436 I | M | | Wear Sensor | NU 3005 |
| D 436 O | M | | Wear Sensor LH | NU 3016-L |
| D 436 O | M | | Wear Sensor RH | NU 3016-R |
| XD 437 | M | | Wear Sensor | NU 3000 |
| XD 437 OE | M | | Wear Sensor LH | NU 3043 |



Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| XD 437 OE | M | | Wear Sensor RH | NU 3044 |
| D 439 | M | | Spring Kit | NU 3006 |
| D 440 I | M | | Wear Sensor | NU 3000 |
| D 441 I | M | | Wear Sensor | NU 3000 |
| D 444 | M | | Piston Clip | NU 3011 |
| D 448 O | M | | Wear Sensor | NU 3021 |
| D 448 I | M | | Wear Sensor | NU 3021 |
| D 449 I | M | | Wear Sensor | NU 3096 |
| D 451 I | M | | Wear Sensor | NU 3000 |
| D 452 I | M | | Wear Sensor | NU 3000 |
| D 456 I | M | | Wear Sensor | NU 3000 |
| D 456 I | M | | Piston Clip | NU 3019 |
| D 456 O | M | | Anti-Rattle | NU 3020 |
| D 459 O | M | R | Hold Down | NU 2038 |
| D 459 O OE | M | R | Hold Down | NU 2038 |
| D 459 O | M | | Wear Sensor | NU 2071 |
| D 459 O OE | M | | Wear Sensor | NU 2071 |
| D 459 O OE | | R | Wear Sensor | NU 2091 |
| D 459 O | | R | Wear Sensor | NU 2091 |
| D 459 I | M | R | Piston Clip | NU 2094 |
| D 459 O | M | | Wear Sensor | NU 2146 |
| D 459 O OE | M | | Wear Sensor | NU 2146 |
| D 459 I | M | R | Piston Clip | NU 2197 |
| D 459 I OE | M | | Piston Clip | NU 2197 |
| D 460 I | M | | Wear Sensor | NU 3085 |
| D 461 I | M | | Wear Sensor | NU 3007 |
| D 462 I | M | | Wear Sensor | NU 3096 |
| D 464 I | M | | Wear Sensor | NU 3000 |
| D 465 I | M | | Wear Sensor | NU 3000 |
| D 466 I | M | R | Wear Sensor | NU 3007 |
| D 467 O | M | | Hold Down | NU 3090 |
| D 469 I | M | | Wear Sensor | NU 3096 |
| D 470 | M | | Wear Sensor LH | NU 3043 |
| D 470 | M | | Wear Sensor RH | NU 3044 |
| D 471 I | M | | Wear Sensor | NU 3038 |
| D 473 I | M | | Wear Sensor | NU 3007 |
| D 474 I | M | | Wear Sensor | NU 3001 |
| D 475 I | M | | Wear Sensor | NU 3001 |
| D 477 OL | M | R | Hold Down | NU 2095 |
| D 477 OR | M | R | Hold Down | NU 2095 |
| D 477 IR | M | R | Piston Clip | NU 2176 |
| D 477 IL | M | R | Piston Clip | NU 2176 |
| D 478 O | M | R | Hold Down LH | NU 2036 |
| D 478 O | M | R | Hold Down RH | NU 2037 |
| D 478 O | M | R | Wear Sensor RH | NU 2134 |
| D 478 O | M | R | Wear Sensor LH | NU 2135 |
| D 478 I | M | R | Piston Clip | NU 2176 |
| D 479 I | M | | Wear Sensor | NU 3000 |
| D 480 I | M | | Wear Sensor | NU 3000 |
| D 481 | M | | Socket | NU 3025-1 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 481 | M | | Spring | NU 3025-2 |
| D 484 I | M | | Wear Sensor | NU 3000 |
| D 485 | M | | Wear Sensor | NU 3096 |
| D 487 | M | | Spring Kit | NU 3006 |
| D 490 | M | | Wear Sensor | NU 3038 |
| D 492 | M | | Pin | NU 3027 |
| D 493 | M | | Spring Kit | NU 3006 |
| D 496 I | M | | Wear Sensor | NU 3001 |
| D 497 I | M | | Wear Sensor | NU 3000 |
| D 498 I | M | | Wear Sensor | NU 3000 |
| D 499 OL | M | R | Hold Down | NU 2008 |
| D 499 OR | M | R | Hold Down | NU 2008 |
| D 499 I | M | R | Piston Clip | NU 2028 |
| D 499 I | M | R | Piston Clip | NU 2170 |
| XD 500 O | M | | Wear Sensor | NU 3056 |
| XD 501 | M | | Wear Sensor | NU 3131 |
| D 502 | M | | Wear Sensor | RH NU 3065 |
| D 502 | M | | Wear Sensor | LH NU 3066 |
| D 503 I | M | | Wear Sensor | LH NU 3029 |
| D 503 I | M | | Wear Sensor | RH NU 3030 |
| D 504 I | M | | Wear Sensor | NU 3001 |
| D 505 O | M | R | Hold Down | NU 2038 |
| D 505 O | M | | Wear Sensor | NU 2071 |
| D 505 O | | R | Wear Sensor | NU 2091 |
| D 505 O | M | | Wear Sensor | NU 2146 |
| D 505 I | M | R | Piston Clip | NU 3023 |
| D 506 O | M | R | Hold Down | NU 2038 |
| D 506 O | M | | Wear Sensor | NU 2071 |
| D 506 O | | R | Wear Sensor | NU 2091 |
| D 506 O | M | | Wear Sensor | NU 2146 |
| D 506 I | M | R | Piston Clip | NU 3024 |
| D 507 | M | R | Wear Sensor | NU 3094 |
| D 508 | M | R | Wear Sensor | NU 3021 |
| D 509 I | M | | Wear Sensor | NU 3000 |
| D 510 I | M | | Wear Sensor | NU 3000 |
| D 511 I | M | | Wear Sensor | NU 3073 |
| D 512 IR | M | R | Piston Clip | NU 2097 |
| D 512 IL | M | R | Piston Clip | NU 2097 |
| D 512 OL | M | R | Hold Down | NU 3022 |
| D 512 OR | M | R | Hold Down | NU 3022 |
| D 514 | M | | Wear Sensor | NU 3021 |
| D 515 I | M | | Wear Sensor | NU 3015 |
| D 517 | M | | Hole Cover | NU 3010 |
| D 517 B | M | | Piston Clip | NU 3037 |
| D 521 O | | R | Wear Sensor | NU 2131 |
| D 521 O | | R | Hold Down | NU 2140 |
| D 522 O | M | R | Wear Sensor | NU 2131 |
| D 522 O | M | R | Hold Down | NU 2140 |
| D 523 O | M | R | Wear Sensor | NU 2131 |
| D 523 O | M | R | Hold Down | NU 2140 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 524 O | M | | Wear Sensor | NU 2131 |
| D 524 O | M | | Hold Down | NU 2140 |
| D 526 I | M | | Wear Sensor | NU 3096 |
| D 526 I | M | | Wear Sensor | NU 3096 |
| XD 527 O | M | | Wear Sensor | NU 3056 |
| D 528 O | M | | Wear Sensor | NU 3056 |
| D 529 I | M | R | Piston Clip | NU 2081 |
| D 529 O | M | R | Hold Down | RH NU 2082 |
| D 529 O | M | R | Hold Down | LH NU 2083 |
| D 530 I | M | | Wear Sensor | NU 3001 |
| D 531 I | M | | Wear Sensor | NU 3085 |
| D 532 I | M | | Wear Sensor | NU 3001 |
| D 534 I | M | | Wear Sensor | NU 3001 |
| D 536 I | M | | Wear Sensor | NU 3001 |
| D 537 I | M | | Wear Sensor | NU 3001 |
| D 538 I | M | | Piston Clip | NU 3031 |
| D 538 O | M | | Hold Down | NU 3032 |
| D 538 O | M | | Wear Sensor | NU 3033 |
| XD 539 | M | | Wear Sensor | NU 3131 |
| D 540 I | M | | Wear Sensor | NU 3000 |
| D 542 | M | | Spring Kit | NU 3006 |
| D 543 I OE | M | | Wear Sensor | NU 2014 |
| D 543 I | M | R | Wear Sensor | NU 2014 |
| D 544 I | M | R | Piston Clip | NU 2132 |
| D 544 O | M | R | Hold Down | NU 2133 |
| D 545 B | M | R | Spring | NU 3009-1 |
| D 545 | M | R | Spring | NU 3009-1 |
| D 545 B | M | R | Pin | NU 3009-2 |
| D 545 | M | R | Pin | NU 3009-2 |
| D 545 B | M | R | Rivet | NU 3040-2 |
| D 545 | M | R | Spring | NU 3063-1 |
| D 545 | M | R | Rivet | NU 3063-2 |
| D 547 I | M | | Piston Clip | NU 3087 |
| D 548 I | M | | Piston Clip | NU 3086 |
| D 549 I | M | | Wear Sensor | NU 3021 |
| XD 552 I | M | | Wear Sensor | NU 3051 |
| D 553 I | M | | Wear Sensor | NU 3073 |
| D 554 | M | | Wear Sensor | NU 3000 |
| D 555 I | M | | Piston Clip | NU 3054 |
| D 556 I | M | | Wear Sensor | NU 3096 |
| D 557 O | M | R | Hold Down | NU 3042 |
| D 558 | M | | Hole Cover | NU 3010 |
| D 558 B | M | | Piston Clip | NU 3011 |
| D 559 IR | M | R | Piston Clip | NU 2097 |
| D 559 IL | M | R | Piston Clip | NU 2097 |
| D 559 IL/IR | M | | Piston Clip | NU 2210 |
| D 559 OR | M | R | Hold Down | NU 3022 |
| D 559 OL | M | R | Hold Down | NU 3022 |
| D 560 I | M | | Wear Sensor | NU 3001 |
| XD 562 IL | M | | Wear Sensor | LH NU 3043 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| XD 562 I | M | | Wear Sensor LH | NU 3043 |
| XD 562 I | M | | Wear Sensor RH | NU 3044 |
| XD 562 IR | M | | Wear Sensor RH | NU 3044 |
| D 563 | M | | Wear Sensor LH | NU 3043 |
| D 563 | M | | Wear Sensor RH | NU 3044 |
| D 564 I | M | | Wear Sensor | NU 3001 |
| D 565 | M | | Spring | NU 3009-1 |
| D 565 | M | | Pin | NU 3009-2 |
| D 566 | M | | Wear Sensor | NU 3041 |
| D 567 I | M | | Wear Sensor | NU 3001 |
| D 568 I | M | | Wear Sensor | NU 3000 |
| XD 570 | M | | Wear Sensor | NU 3131 |
| XD 571 | M | | Wear Sensor RH | NU 3049 |
| XD 571 | M | | Wear Sensor LH | NU 3050 |
| XD 572 | M | | Wear Sensor RH | NU 3046 |
| XD 572 | M | | Wear Sensor LH | NU 3047 |
| D 574 I | M | | Wear Sensor | NU 3001 |
| D 576 I | M | R | Piston Clip | NU 2066 |
| D 576 OR | M | R | Hold Down RH | NU 2067 |
| D 576 OL | M | R | Hold Down LH | NU 2068 |
| D 576 I | M | R | Wear Sensor | NU 2142 |
| D 579 I | M | | Wear Sensor | NU 3058 |
| D 580 I | M | | Wear Sensor | NU 3073 |
| D 581 | M | | Spring | NU 3061-1 |
| D 581 | M | | Rivet | NU 3061-2 |
| D 583 I | M | | Wear Sensor | NU 3001 |
| D 583 O | M | | Wear Sensor LH | NU 3070 |
| D 583 O | M | | Wear Sensor RH | NU 3071 |
| D 585 IOE | M | | Wear Sensor | NU 3060 |
| D 585 I | M | | Wear Sensor | NU 3085 |
| D 586 | M | | Spring | NU 3009-1 |
| D 586 | M | | Pin | NU 3009-2 |
| D 587 I | M | | Wear Sensor | NU 3057 |
| D 588 | M | | Wear Sensor | NU 3038 |
| D 590 | M | | Spring Kit | NU 3006 |
| D 591 I | M | R | Piston Clip | NU 2143 |
| D 591 O | M | R | Hold Down | NU 2144 |
| D 593 | M | R | Piston Clip | NU 2081 |
| D 593 | M | R | Hold Down RH | NU 2082 |
| D 593 | M | R | Hold Down LH | NU 2083 |
| D 595 I | M | | Wear Sensor | NU 3000 |
| D 596 I | M | | Wear Sensor | NU 3038 |
| D 597 IOE | M | | Piston Clip | NU 2066 |
| D 597 I | M | R | Piston Clip | NU 2066 |
| D 597 OR OE | M | | Hold Down RH | NU 2067 |
| D 597 OR | M | R | Hold Down RH | NU 2067 |
| D 597 OL | M | R | Hold Down LH | NU 2068 |
| D 597 OL OE | M | | Hold Down LH | NU 2068 |
| D 597 I | M | R | Piston Clip | NU 2126 |
| D 597 IOE | M | | Piston Clip | NU 2126 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|-------------------------|-----------------|
| D 598 | M | R | Spring Kit | NU 3006 |
| D 599 | M | R | Spring Kit | NU 3006 |
| D 601 | M | R | Spring Kit | NU 3006 |
| D 607 O OE | M | R | Hold Down | NU 2145 |
| D 607 O | M | R | Hold Down | NU 2145 |
| D 610 | M | R | Spring Kit | NU 3006 |
| D 611 I OE | M | | Wear Sensor | NU 3005 |
| D 611 I | M | | Wear Sensor | NU 3005 |
| D 611 O | M | | Wear Sensor RH | NU 3065 |
| D 611 O | M | | Wear Sensor LH | NU 3066 |
| D 614 O | M | R | Wear Sensor | NU 2146 |
| XD 615 O | M | | Wear Sensor | NU 3056 |
| XD 616 O | M | | Wear Sensor | NU 3056 |
| D 617 I | M | | Wear Sensor | NU 3001 |
| D 618 | M | | Hole Cover | NU 3010 |
| D 618 B | M | | Piston Clip | NU 3076 |
| XD 619 | M | | Wear Sensor RH | NU 3049 |
| XD 619 | M | | Wear Sensor LH | NU 3050 |
| D 621 I | M | | Wear Sensor | NU 3001 |
| D 623 O | M | R | Hold Down | NU 2038 |
| D 623 O | M | | Wear Sensor | NU 2071 |
| D 623 O | | R | Wear Sensor | NU 2091 |
| D 623 O | M | | Wear Sensor | NU 2146 |
| D 623 I | M | R | Piston Clip | NU 3023 |
| D 625 | M | R | Piston Clip Inner | NU 2150 |
| D 625 | M | R | Hold Down Outer | NU 2192 |
| D 625 | M | R | Wear Sensor | NU 3033 |
| D 626 O | M | R | Wear Sensor | NU 2147 |
| D 626 O | M | R | Hold Down | NU 2148 |
| D 627 | M | R | Spring Kit | NU 3006 |
| D 628 I | M | | Wear Sensor | NU 2149 |
| D 628 O | M | | Spring | NU 3009-1 |
| D 628 I | M | | Spring | NU 3009-1 |
| D 628 O | M | | Pin | NU 3009-2 |
| D 628 I | M | | Pin | NU 3009-2 |
| D 629 | M | | Wear Sensor LH | NU 3075 |
| D 629 | M | | Wear Sensor RH | NU 3077 |
| D 630 | M | | Wear Sensor LH | NU 3075 |
| D 630 | M | | Wear Sensor RH | NU 3077 |
| D 631 I | M | | Wear Sensor | NU 3085 |
| D 632 O | M | R | Wear Sensor | NU 2147 |
| D 632 O | M | R | Hold Down | NU 2148 |
| D 633 I | M | R | Piston Clip | NU 2153 |
| D 633 O | M | R | Hold Down & Wear Sensor | NU 2154 |
| D 634 | M | | Spring Kit | NU 3006 |
| D 634 | M | | Pin | NU 3079 |
| D 636 | M | | Wear Sensor | NU 3078 |
| D 637 I | M | | Wear Sensor | NU 3001 |
| D 638 | M | | Spring Kit | NU 3089 |
| D 640 I | M | | Piston Clip | NU 3138 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|-------------------------|-----------------|
| D 641 | M | R | Piston Clip | NU 2097 |
| D 641 | M | | Piston Clip | NU 2210 |
| D 641 | M | R | Hold Down | NU 3022 |
| D 642 O | M | R | Hold Down & Wear Sensor | NU 2151 |
| D 642 I | M | R | Piston Clip | NU 2152 |
| D 643 | M | | Wear Sensor | NU 3113 |
| D 644 I | M | | Piston Clip | NU 3081 |
| D 645 | M | | Rivet | NU 3040-2 |
| D 645 | M | | Spring | NU 3082-1 |
| D 647 | M | | Wear Sensor | NU 3005 |
| D 648 I | M | R | Piston Clip | NU 2155 |
| D 649 I | M | | Piston Clip | NU 3083 |
| D 649 I | M | | Wear Sensor | NU 3116 |
| D 650 I | M | R | Piston Clip | NU 2156 |
| D 650 OL | M | R | Wear Sensor | LH NU 2157 |
| D 650 OR | M | R | Hold Down | NU 2158 |
| D 650 OL | M | R | Hold Down | NU 2158 |
| D 650 OR | M | R | Wear Sensor | RH NU 2159 |
| D 650 OL | M | R | Hold Down | NU 2186 |
| D 650 OR | M | R | Hold Down | NU 2186 |
| D 652 | M | R | Wear Sensor | NU 3121 |
| XD 653 I | M | | Wear Sensor | NU 3096 |
| XD 653 I OE | M | | Wear Sensor | NU 3096 |
| D 654 O | M | R | Hold Down | NU 2145 |
| D 656 | M | R | Spring Kit | NU 3006 |
| XD 657 O | M | | Wear Sensor | NU 3056 |
| D 658 | M | R | Piston Clip | NU 2097 |
| D 658 | M | | Piston Clip | NU 2210 |
| D 658 | M | R | Hold Down | NU 3022 |
| D 662 O | M | R | Hold Down | NU 2133 |
| D 662 I | M | R | Piston Clip | NU 2161 |
| D 664 OR | M | R | Anti-Rattle | RH NU 2162 |
| D 664 OL | M | R | Anti-Rattle | LH NU 2163 |
| D 664 IR | M | R | Piston Clip | NU 2164 |
| D 664 IL | M | R | Piston Clip | NU 2164 |
| D 664 OR | M | R | Hold Down | NU 2192 |
| D 664 OL | M | R | Hold Down | NU 2192 |
| D 666 IR | M | R | Piston Clip | NU 2150 |
| D 666 IL | M | R | Piston Clip | NU 2150 |
| D 666 OR | M | R | Anti-Rattle | RH NU 2162 |
| D 666 OL | M | R | Anti-Rattle | LH NU 2163 |
| D 666 OL | M | R | Hold Down | NU 2192 |
| D 666 OR | M | R | Hold Down | NU 2192 |
| D 666 IR | M | R | Wear Sensor | NU 3033 |
| D 666 IL | M | R | Wear Sensor | NU 3033 |
| D 667 IR | M | R | Piston Clip | NU 2171 |
| D 667 IL | M | R | Piston Clip | NU 2171 |
| D 667 OL | M | R | Hold Down | NU 2192 |
| D 667 OR | M | R | Hold Down | NU 2192 |
| D 667 IR | M | R | Wear Sensor | NU 3033 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 667 IL | M | R | Wear Sensor | NU 3033 |
| XD 668 I | M | | Wear Sensor | NU 3000 |
| XD 668 O | M | | Wear Sensor | NU 3091 |
| D 669 I | M | | Wear Sensor | NU 3093 |
| D 670 O | M | R | Wear Sensor | NU 2131 |
| D 670 O | M | R | Hold Down | NU 2140 |
| XD 672 I | M | | Wear Sensor | NU 3092 |
| D 673 O | M | R | Hold Down | NU 2038 |
| D 673 O | M | R | Wear Sensor | NU 2166 |
| D 673 I | M | R | Wear Sensor | NU 2166 |
| D 673 I | M | R | Piston Clip | NU 3024 |
| D 674 I | M | | Piston Clip | NU 2150 |
| D 674 I | M | | Piston Clip | NU 2171 |
| D 674 O | M | | Anti-Rattle | NU 2172 |
| D 674 O | M | | Hold Down | NU 2192 |
| D 676 | M | | Spring Kit | NU 3089 |
| D 677 | M | | Wear Sensor | NU 3131 |
| D 679 | M | R | Wear Sensor | NU 3121 |
| D 682 I | M | | Piston Clip | NU 3118 |
| D 683 I | M | | Piston Clip | NU 3118 |
| D 684 | M | | Spring Kit | NU 3040 |
| D 685 | M | | Wear Sensor | RH NU 3106 |
| D 685 | M | | Wear Sensor | LH NU 3107 |
| D 687 I | M | | Piston Clip | NU 3097 |
| D 688 I | M | | Piston Clip | NU 3088 |
| D 688 IB | M | | Piston Clip | NU 3088 |
| D 690 I | | R | Piston Clip | NU 2150 |
| D 690 I | | R | Piston Clip | NU 2171 |
| D 690 O | | R | Anti-Rattle | NU 2172 |
| D 690 O | | R | Hold Down | NU 2192 |
| D 691 | M | | Wear Sensor | NU 3100 |
| D 691 | M | | Wear Sensor | NU 3104 |
| D 692 B | M | | Piston Clip | NU 3037 |
| D 692 | M | | Piston Clip | NU 3118 |
| D 694 I | M | | Piston Clip | NU 3101 |
| D 694 O | M | | Piston Clip | NU 3103 |
| D 695 IL | M | | Wear Sensor | LH NU 3043 |
| D 695 IR | M | | Wear Sensor | RH NU 3044 |
| D 696 | M | | Spring Kit | NU 3040 |
| D 698 | M | R | Wear Sensor | NU 3021 |
| D 699 | M | R | Wear Sensor | NU 2166-1 |
| XD 700 I | M | | Wear Sensor | NU 3096 |
| D 701 | M | | Wear Sensor | LH NU 3881-L |
| D 701 | M | | Wear Sensor | RH NU 3881-R |
| D 702 | M | | Wear Sensor | NU 2173 |
| D 703 I | M | | Spring | NU 3061-1 |
| D 703 I | M | | Rivet | NU 3061-2 |
| D 703 O | M | | Rivet | NU 3063-2 |
| D 703 O | M | | Anti-Rattle Spring | NU 3102 |
| D 704 | M | | Spring Kit | NU 3040 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|-------------------------|-----------------|
| D 706 | M | R | Spring Kit | NU 3006 |
| D 708 | M | R | Spring Kit | NU 3006 |
| D 710 I | M | | Piston Clip | NU 3125 |
| D 711 IL | M | R | Piston Clip | NU 2150 |
| D 711 IR | M | R | Piston Clip | NU 2150 |
| D 711 OL | M | R | Hold Down | NU 2192 |
| D 711 OR | M | R | Hold Down | NU 2192 |
| D 712 OL | M | R | Hold Down | NU 2095 |
| D 712 OR | M | R | Hold Down | NU 2095 |
| D 712 IL | M | R | Piston Clip | NU 2176 |
| D 712 IR | M | R | Piston Clip | NU 2176 |
| D 713 IL | M | R | Piston Clip | NU 2150 |
| D 713 IR | M | R | Piston Clip | NU 2150 |
| D 713 OR | M | R | Anti-Rattle | RH NU 2162 |
| D 713 OL | M | R | Anti-Rattle | LH NU 2163 |
| D 713 OR | M | R | Hold Down | NU 2192 |
| D 713 OL | M | R | Hold Down | NU 2192 |
| D 713 IL | M | R | Wear Sensor | NU 3033 |
| D 713 IR | M | R | Wear Sensor | NU 3033 |
| D 714 | M | R | Wear Sensor | NU 3021 |
| D 715 O | M | R | Hold Down | NU 2133 |
| D 715 I | M | R | Piston Clip | NU 2178 |
| XD 716 O | M | | Wear Sensor | NU 3056 |
| XD 716 I | M | | Wear Sensor | NU 3092 |
| D 717 I | M | | Wear Sensor | NU 2204 |
| D 719 O | M | R | Wear Sensor | NU 2131 |
| D 719 O | M | | Wear Sensor | NU 3095 |
| D 720 | M | | Spring Kit | NU 3089 |
| D 721 | M | | Wear Sensor | NU 3113 |
| D 722 | M | | Wear Sensor | NU 3113 |
| D 723 | M | | Wear Sensor | NU 3113 |
| D 724 | M | | Spring | NU 3009-1 |
| D 724 | M | | Pin | NU 3009-2 |
| D 725 O | M | | Hole Cover | NU 3010 |
| D 725 I | M | | Piston Clip | NU 3120 |
| D 727 I | M | R | Wear Sensor | NU 2177 |
| D 728 | M | | Wear Sensor | NU 3094 |
| D 729 | M | R | Wear Sensor | NU 2177 |
| D 730 I | M | R | Piston Clip | NU 2143 |
| D 730 O | M | R | Hold Down & Wear Sensor | NU 2151 |
| D 731 | M | R | Wear Sensor | NU 2179 |
| D 732 | M | | Wear Sensor | LH NU 2180 |
| D 732 | M | | Wear Sensor | RH NU 2182 |
| D 733 I | M | | Wear Sensor | NU 3112 |
| D 736 I | M | | Piston Clip | NU 3111 |
| D 742 | M | | Spring Kit | NU 3089 |
| D 743 I | M | | Wear Sensor | NU 3001 |
| D 745 I | M | R | Piston Clip | NU 2155 |
| D 746 I | M | R | Piston Clip | NU 2183 |
| D 746 O | M | R | Hold Down | RH NU 2184 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 746 O | M | R | Hold Down LH | NU 2185 |
| D 747 I | M | | Wear Sensor | NU 3096 |
| D 749 | M | | Wear Sensor | NU 2179 |
| D 750 I | M | | Wear Sensor LH | NU 2180 |
| D 750 I | M | | Wear Sensor RH | NU 2182 |
| D 751 O | M | R | Hold Down | NU 2133 |
| D 751 I | M | R | Piston Clip | NU 2178 |
| D 752 I | M | R | Wear Sensor | NU 2177 |
| D 753 O | M | R | Wear Sensor | NU 2166 |
| D 754 | M | | Wear Sensor | NU 3021 |
| D 755 I | M | | Wear Sensor | NU 3117 |
| D 759 | M | | Piston Clip | NU 2097 |
| D 759 | M | | Piston Clip | NU 2210 |
| D 759 | M | | Hold Down | NU 3022 |
| D 760 I | M | | Piston Clip | NU 2066 |
| D 760 OR | M | | Hold Down RH | NU 2067 |
| D 760 OL | M | | Hold Down LH | NU 2068 |
| D 761 IL/OR | M | | Hold Down | NU 2158 |
| D 761 IR/OL | M | | Hold Down | NU 2158 |
| D 761 IL/OR | M | | Anti-Rattle Outer RH | NU 2162 |
| D 761 IR/OL | M | | Anti-Rattle Outer LH | NU 2163 |
| D 761 IL/OR | M | | Piston Clip Inner | NU 3123 |
| D 761 IR/OL | M | | Piston Clip Inner | NU 3123 |
| D 762 | M | | Piston Clip Inner | NU 2155 |
| D 763 I | M | | Piston Clip | NU 2178 |
| D 764 I | M | | Wear Sensor | NU 3000 |
| D 765 | M | R | Spring Kit | NU 3006 |
| D 766 I | M | | Piston Clip | NU 3115 |
| D 766 I | M | | Wear Sensor | NU 3116 |
| D 767 I | M | | Rivet | NU 2009 |
| D 767 IF | M | | Rivet | NU 2009 |
| D 767 I | M | R | Wear Sensor | NU 2010 |
| D 767 I | M | R | Piston Clip | NU 2011 |
| D 767 IF | M | | Piston Clip | NU 2031 |
| D 767 I | M | | Anti-Flash Plate | NU 2174 |
| D 768 | M | | Piston Clip | NU 3103 |
| D 768 OE | M | | Piston Clip | NU 3103 |
| D 768 | M | | Piston Clip | NU 3119 |
| D 768 OE | M | | Piston Clip | NU 3119 |
| D 771 | M | | Wear Sensor | NU 3129 |
| D 771 | M | | Wear Sensor | NU 3771 |
| D 772 | M | | Wear Sensor | NU 3130 |
| D 772 | M | | Wear Sensor | NU 3772 |
| D 774 I | M | | Wear Sensor | NU 3094 |
| D 775 I | M | | Wear Sensor | NU 3038 |
| D 778 IOE | M | | Piston Clip | NU 2155 |
| D 778 | M | | Piston Clip | NU 2155 |
| D 780 | M | | Spring Kit | NU 3040 |
| D 780 OE | M | | Spring Kit | NU 3040 |
| D 781 I | M | | Piston Clip | NU 3114 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|------------------------|
| D 782 | M | R | Piston Clip | NU 2097 |
| D 782 | M | | Piston Clip | NU 2210 |
| D 782 | M | R | Hold Down | NU 3022 |
| D 783 I | M | | Piston Clip | NU 3111 |
| D 784 | M | | Wear Sensor | NU 2187 |
| D 785 | M | | Wear Sensor | NU 2188 |
| D 787 I | M | | Wear Sensor | NU 3000 |
| D 789 O | M | R | Hold Down | NU 2038 |
| D 789 O | M | | Wear Sensor | NU 2071 |
| D 789 O | | R | Wear Sensor | NU 2091 |
| D 789 O | M | | Wear Sensor | NU 2146 |
| D 789 I | M | R | Piston Clip | NU 2191 |
| D 790 I | M | | Piston Clip | 2 per plate NU 2161 |
| D 790 O | M | | Wear Sensor | LH NU 2189 |
| D 790 O | M | | Wear Sensor | RH NU 2190 |
| D 791 I | M | | Piston Clip | NU 2161 |
| D 792 | M | | Wear Sensor | NU 2193 |
| D 794 I | M | | Piston Clip | NU 3139 |
| D 794 I | M | | Piston Clip | NU 3794 |
| D 795 I | M | | Piston Clip | NU 3118 |
| D 796 I | M | | Piston Clip | NU 3083 |
| D 799 | M | | Wear Sensor | LH NU 3016-L |
| D 799 | M | | Wear Sensor | RH NU 3016-R |
| D 800 O | M | | Wear Sensor | NU 2194 |
| D 800 I | M | | Piston Clip | NU 3111 |
| D 801 I OE | M | | Piston Clip | NU 2155 |
| D 801 I | M | R | Piston Clip | NU 2155 |
| D 805 | M | | Hold Down | NU 2201 |
| D 806 | M | | Spring Kit | NU 3006 |
| D 807 I | M | | Wear Sensor | NU 3096 |
| D 809 | M | | Hole Cover | NU 3010 |
| D 809 | M | | Piston Clip | NU 3036 |
| D 812 | M | | Wear Sensor | NU 3130 |
| D 812 | M | | Wear Sensor | NU 3772 |
| D 813 I | M | | Wear Sensor | NU 3134 |
| D 814 | M | R | Wear Sensor | NU 3021 |
| D 815 | M | | Wear Sensor | NU 3096 |
| D 816 O | M | | Hold Down | NU 2198 KIT |
| D 816 O | M | | Spring | NU 2199 |
| D 816 I | M | | Piston Clip | NU 2200 |
| D 818 | M | | Wear Sensor | NU 2146 |
| D 818 | M | | Wear Sensor | NU 2166 |
| D 819 O | M | | Wear Sensor | NU 2194 |
| D 819 I | M | | Piston Clip | NU 3111 |
| D 820 I | M | R | Piston Clip | NU 2183 |
| D 820 O | M | R | Hold Down | NU 2202 |
| D 822 I | M | | Wear Sensor | NU 3126 |
| D 823 I | M | | Wear Sensor | NU 3127 |
| D 825 | M | | Wear Sensor | NU 2203 |
| D 826 | M | | Wear Sensor | NU 2203 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|-------------------------|-----------------|
| D 827 | M | | Wear Sensor | NU 2203 |
| D 829 I | M | | Wear Sensor | NU 3000 |
| D 829 I | M | | Wear Sensor | NU 3128 |
| D 830 | M | | Wear Sensor | NU 3096 |
| D 831 IR | M | | Wear Sensor | NU 3126 |
| D 831 IL | M | | Wear Sensor | NU 3126 |
| D 832 I | M | | Wear Sensor | NU 3001 |
| D 832 O | M | | Hold Down & Anti-Rattle | NU 3135 |
| D 834 | M | | Wear Sensor | NU 2193 |
| D 836 I | M | | Piston Clip | NU 3132 |
| D 836 I | M | | Piston Clip | NU 3133 |
| D 837 | M | | Spring Kit | NU 3040 |
| D 838 | M | | Spring Kit | NU 3006 |
| D 840 I | M | | Piston Clip | NU 3132 |
| D 840 I | M | | Piston Clip | NU 3133 |
| D 841 | M | | Wear Sensor | NU 2206 |
| D 843 I | M | | Piston Clip | NU 2209 |
| D 843 I OE | M | | Piston Clip | NU 2209 |
| D 845 O | M | R | Hold Down | NU 2038 |
| D 845 O | M | R | Hold Down | NU 2038 |
| D 845 O | M | | Wear Sensor | NU 2071 |
| D 845 O | | R | Wear Sensor | NU 2091 |
| D 845 O | | R | Wear Sensor | NU 2091 |
| D 845 I | M | R | Piston Clip | NU 2196 |
| D 846 I | M | | Wear Sensor | NU 3126 |
| D 849 | M | | Hold Down | NU 2201 |
| D 850 O | M | | Wear Sensor | NU 2166 |
| XD 855 | M | | Wear Sensor | NU 3100 |
| XD 855 | M | | Wear Sensor | NU 3104 |
| D 856 | M | | Wear Sensor | NU 3856 |
| D 857 I | M | | Piston Clip | NU 2211 |
| D 857 O | M | | Wear Sensor | NU 3857 |
| D 858 I | M | | Piston Clip | NU 2178 |
| D 858 O | M | | Hold Down | LH NU 2212 |
| D 858 O | M | | Hold Down | RH NU 2213 |
| D 859 | M | | Wear Sensor | NU 2173 |
| D 862 IL/OR | M | | Wear Sensor | NU 3064 |
| D 862 IR/OL | M | | Wear Sensor | NU 3064 |
| D 863 I | M | | Wear Sensor | NU 3134 |
| D 864 I | M | | Wear Sensor | NU 3096 |
| D 865 I | M | | Wear Sensor | NU 3038 |
| D 866 | M | | Wear Sensor | NU 3113 |
| D 868 O | M | | Anti-Rattle | NU 3020 |
| D 868 I | M | | Wear Sensor | T.B.A |
| D 868 O | M | | Hold Down | T.B.A. |
| D 869 I | M | | Piston Clip | NU 2209 |
| D 869 O | M | | Wear Sensor | NU 2214 |
| D 875 IR/OL | M | | Hold Down | NU 2158 |
| D 875 OR | M | | Hold Down | NU 2158 |
| D 875 OR | M | | Anti-Rattle | RH NU 2162 |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|-----------------|
| D 875 IR/OL | M | | Anti-Rattle Outer LH | NU 2163 |
| D 875 IL | M | | Piston Clip | NU 3123 |
| D 875 IR/OL | M | | Piston Clip Inner | NU 3123 |
| D 878 | M | | Spring Kit | NU 3006 |
| D 879 IL/OR | M | R | Piston Clip Inner | NU 2150 |
| D 879 IR/OL | M | R | Piston Clip Inner | NU 2150 |
| D 879 IL/OR | M | R | Hold Down Outer | NU 2192 |
| D 879 IR/OL | M | R | Hold Down Outer | NU 2192 |
| D 881 IL | M | R | Piston Clip | NU 2150 |
| D 881 IR | M | R | Piston Clip | NU 2150 |
| D 881 IL/OR | M | | Piston Clip Inner | NU 2171 |
| D 881 IR/OL | M | | Hold down Outer | NU 2192 |
| D 881 IL/OR | M | | Hold down Outer | NU 2192 |
| D 882 | M | | Wear Sensor | NU 3113 |
| D 883 | M | | Wear Sensor | NU 3141 |
| D 884 | M | | Wear Sensor | NU 3113 |
| D 884 | M | | Wear Sensor | NU 3113 |
| D 886 | M | | Spring Kit | NU 3006 |
| D 887 I | M | | Wear Sensor | NU 3015 |
| D 888 | M | | Wear Sensor | NU 3015 |
| D 888 | M | | Wear Sensor | NU 3096 |
| D 889 I | M | | Wear Sensor | NU 3145 |
| D 891 | M | | Wear Sensor | NU 3078 |
| D 893 I | M | | Wear Sensor | NU 3144 |
| D 897 | M | | Wear Sensor | NU 2138 |
| D 898 | M | | Wear Sensor | NU 2219 |
| D 899 | M | | Anti-Rattle | NU 2217 |
| D 899 | M | | Anti-Rattle | NU 2218 |
| D 899 | M | | Wear Sensor | NU 6007 |
| D 900 I | M | | Wear Sensor | NU 3146 |
| D 903 I | M | | Wear Sensor | NU 3096 |
| D 905 I | M | | Wear Sensor | NU 3038 |
| D 905 I | M | | Wear Sensor | NU 3038 |
| D 906 | M | | Wear Sensor | T.B.A. |
| D 908 | M | | Wear Sensor | T.B.A. |
| D 909 | M | | Wear Sensor | NU 2222 |
| D 913 | M | | Wear Sensor | NU 2223 |
| D 914 I | M | | Wear Sensor | NU 3147 |
| D 923 | M | | Wear Sensor | NU 3113 |
| D 924 I | M | | Wear Sensor | NU 3096 |
| D 929 I | M | | Wear Sensor | NU 3869 |
| D 932 I | M | | Piston Clip | NU 2150 |
| D 932 O | M | | Hold Down | NU 2186 |
| D 932 OR | M | | Anti-Rattle RH | NU 2224 |
| D 932 OL | M | | Anti-Rattle LH | NU 2225 |
| D 934 O | M | | Wear Sensor LH | NU 2226 |
| D 934 O | M | | Wear Sensor RH | NU 2227 |
| D 934 I | M | | Piston Clip | NU 2228 |
| D 934 I | M | | Hold Down | NU 2229 |
| D 934 I | M | | Anti-Rattle | NU 2230 |



Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number | |
|-------------|---------|---------|----------------------|-----------------|---------|
| D 934 O | M | | Anti-Rattle | NU 2230 | |
| D 935 I | M | | Piston Clip | NU 2228 | |
| D 935 O | M | | Wear Sensor | NU 2231 | |
| D 937 | M | | Wear Sensor | NU 2206 | |
| D 941 I | M | | Wear Sensor | NU 3015 | |
| D 943 I | M | | Wear Sensor | NU 3147 | |
| D 952 IL/OR | M | | Piston Clip | Inner | NU 2150 |
| D 952 IL/OL | M | | Piston Clip | Inner | NU 2150 |
| D 952 IL/OR | M | | Hold Down | Outer | NU 2192 |
| D 952 IL/OL | M | | Hold Down | Outer | NU 2192 |
| D 954 I | M | | Wear Sensor | NU 3134 | |
| D 955 I | M | | Wear Sensor | NU 3096 | |
| D 956 | M | | Wear Sensor | NU 3113 | |
| D 957 I | M | | Wear Sensor | NU 3165 | |
| D 958 I | M | | Wear Sensor | NU 3147 | |
| D 962 | M | | Wear Sensor | NU 2240 | |
| D 963 OL | M | | Anti-Rattle | LH | NU 2234 |
| D 963 OR | M | | Anti-Rattle | RH | NU 2235 |
| D 963 OL | M | | Hold Down | NU 2236 | |
| D 963 OR | M | | Hold Down | NU 2236 | |
| D 963 I | M | | Piston Clip | NU 2237 | |
| D 964 I | M | | Piston Clip | NU 2150 | |
| D 964 O | M | | Hold Down | NU 2192 | |
| D 965 | M | | Wear Sensor | NU 2219 | |
| D 969 I | M | | Anti-Rattle | NU 3160 | |
| D 969 O | M | | Wear Sensor | NU 3804 | |
| D 974 I & O | M | | Wear Sensor | NU 3809 | |
| D 975 | M | | Wear Sensor | NU 2193 | |
| D 976 | M | | Wear Sensor | NU 3163 | |
| D 976 | M | | Wear Sensor | NU 3164 | |
| D 977 | M | | Roller Pin | 4 per plate | NU 3806 |
| D 978 | M | | Roller Pin | 2 per plate | NU 3818 |
| D 979 I | M | | Piston Clip | NU 3120 | |
| D 979 O | M | | Hold Down | NU 3162 | |
| D 980 I | M | | T.B.A. | T.B.A. | |
| D 980 O | M | | T.B.A. | T.B.A. | |
| D 981 I | M | | Piston Clip | NU 2150 | |
| D 981 OL | M | | Hold Down | NU 2192 | |
| D 981 OR | M | | Hold Down | NU 2192 | |
| D 981 OL | M | | Anti-Rattle | LH | NU 2238 |
| D 981 OR | M | | Anti-Rattle | RH | NU 2239 |
| D 988 I | M | | Piston Clip | NU 3023 | |
| D 989 | M | | Wear Sensor | NU 2242 | |
| D 990 IL | M | | Wear Sensor | NU 3126 | |
| D 990 IR | M | | Wear Sensor | NU 3126 | |
| D 995 I | M | | Wear Sensor | NU 3126 | |
| D 998 O | M | | Hold Down | NU 2236 | |
| D 998 I | M | | Piston Clip | NU 2243 | |
| D 998 O | M | | Anti-Rattle | NU 2244 | |
| D 998 O | M | | Anti-Rattle | NU 2245 | |

Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|----------------------|------------------------|
| D 999 I | M | | Wear Sensor | NU 2241 |
| D 1000 | M | | Wear Sensor | NU 2166-1 |
| D 1001 | M | | Wear Sensor | NU 3805 |
| D 1002 | M | | Wear Sensor | NU 3078 |
| D 1003 I | M | | Piston Clip | NU 3120 |
| D 1003 O | M | | Hold Down | NU 3162 |
| D 1004 | M | | Wear Sensor | T.B.A. |
| D 1006 | M | | Piston Clip | T.B.A. |
| D 1007 | M | | Roller Pin | 4 per plate NU 3806 |
| D 1008 I | M | | Wear Sensor | NU 3146 |
| D 1010 | M | | Wear Sensor | NU 3810 |
| D 1012 OL | M | | Anti-Rattle | LH NU 2234 |
| D 1012 OR | M | | Anti-Rattle | RH NU 2235 |
| D 1012 OL | M | | Hold Down | NU 2236 |
| D 1012 OR | M | | Hold Down | NU 2236 |
| D 1012 I | M | | Piston Clip | NU 3803-1 |
| D 1012 I | M | | Piston Clip washer | NU 3803-2 |
| D 1013 I | M | | Wear Sensor | NU 3804 |
| D 1014 | M | | Roller Pin | 4 per plate NU 3806 |
| D 1015 I | M | | Wear Sensor | NU 3808 |
| D 1019 | M | | Wear Sensor | NU 2290 |
| D 1020 | M | | Wear Sensor | NU 2289 |
| D 1023 | M | | Spring Kit | NU 3006 |
| D 1028 | M | | Wear Sensor | NU 3811 |
| D 1031 I | M | | Wear Sensor | NU 3814 |
| D 1032 | M | | Wear Sensor | NU 3815 |
| D 1033 I | M | | Wear Sensor | NU 3812 |
| D 1033 O | M | | Wear Sensor | NU 3812 |
| D 1035 I | M | | Wear Sensor | NU 3814 |
| D 1037 I | M | | Wear Sensor | NU 3834 |
| D 1037 O | M | | Hold Down | NU 3020 |
| D 1039 | M | | Wear Sensor | NU 3824 |
| D 1040 I | M | | Piston Clip | NU 2150 |
| D 1040 OL | M | | Hold Down | NU 2186 |
| D 1040 OR | M | | Hold Down | NU 2186 |
| D 1041 I | M | | Piston Clip | NU 3827 |
| D 1041 O | M | | Hold Down | NU 2236 |
| D 1041 O | M | | Wear Sensor | NU 3826 |
| D 1041 OL | M | | Anti-Rattle | LH NU 2225 |
| D 1041 OR | M | | Anti-Rattle | RH NU 2224 |
| D 1043 | M | | Hold Down | NU 3137 |
| D 1044 I | M | | Piston Clip | NU 3831 |
| D 1047 I | M | | Piston Clip | NU 3833 |
| D 1049 | M | | Wear Sensor | NU 3805 |
| D 1050 | M | | Wear Sensor | NU 3805 |
| D 1051 I | M | | Wear Sensor | NU 3127 |
| D 1052 | M | | Wear Sensor | NU 3131 |
| D 1053 | M | | Wear Sensor | NU 3805 |
| D 1054 | M | | Wear Sensor | NU 2173 |
| D 1055 I | M | | Piston Clip | NU 3835 |



Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|--------------|---------|---------|-------------------------|-----------------|
| D 1055 O | M | | Piston Clip | NU 3103 |
| D 1056 | M | | Wear Sensor 2 per plate | NU 2193 |
| D 1057 | M | | Wear Sensor 2 per plate | NU 3839 |
| D 1058 | M | | Wear Sensor 2 per plate | NU 3840 |
| D 1063 I | M | | Wear Sensor | NU 3808 |
| D 1064 | M | | Wear Sensor | NU 3810 |
| D 1065 | M | | Hold Down 2 per plate | NU 2201 |
| D 1073 I | M | | Wear Sensor | NU 3821 |
| D 1074 I | M | | Wear Sensor | NU 3096 |
| D 1075 | M | | Wear Sensor | NU 3824 |
| D 1076 | M | | Wear Sensor | NU 3838 |
| D 1077 | M | | Wear Sensor | NU 3813 |
| D 1078 | M | | Wear Sensor/Anti Rattle | NU 3851 |
| D 1078 | M | | Anti-Rattle | NU 3852 |
| D 1080 I | M | | Wear Sensor | NU 3822 |
| D 1081 | M | | Spring | NU 3847 |
| D 1082 | M | | Spring Kit | NU 3006 |
| D 1085 | M | | Wear Sensor | NU 3813 |
| D 1086 I | M | | Wear Sensor | NU 3001 |
| D 1086 I | M | | Piston Clip | NU 3853 |
| D 1087 I | M | | Piston Clip | NU 3862 |
| D 1087 O | M | | Hold Down | NU 2236 |
| D 1087 O | M | | Anti-Rattle RH | NU 2224 |
| D 1087 O | M | | Anti-Rattle LH | NU 2225 |
| D 1088 I | M | | Wear Sensor | NU 3854 |
| D 1089 I | M | | Wear Sensor LH | NU 3855-L |
| D 1089 I | M | | Wear Sensor RH | NU 3855-R |
| D 1090 I | M | | Wear Sensor | NU 3854 |
| D 1091 I | M | | Wear Sensor | NU 3860 |
| D 1092 I | M | | Wear Sensor | NU 3858 |
| D 1093 I | M | | Wear Sensor | NU 3863 |
| XD 1094 | M | | Wear Sensor | NU 3864 |
| D 1097 I | M | | Wear Sensor | NU 3096 |
| D 1101 I | M | | Wear Sensor | NU 3866 |
| D 1102 I | M | | Wear Sensor | NU 2241 |
| D 1103 I | M | | Wear Sensor | NU 3854 |
| D 1104 I | M | | Wear Sensor | NU 3096 |
| D 1107 I | M | | Piston Clip | NU 2200 |
| D 1109 IL/OR | M | | Piston Clip | NU 2150 |
| D 1109 IL/OR | M | | Hold Down | NU 2192 |
| D 1109 IL/OR | M | | Anti-Rattle LH | NU 2238 |
| D 1109 IR/OL | M | | Piston Clip | NU 2150 |
| D 1109 IR/OL | M | | Hold Down | NU 2192 |
| D 1109 IR/OL | M | | Anti-Rattle RH | NU 2239 |
| D 1111 I | M | | Piston Clip | NU 3111 |
| D 1111 O | M | | Hold Down | NU 3162 |
| D 1112 | M | | Spring Kit | NU 3006 |
| D 1113 I | M | | Wear Sensor | NU 3868 |
| D 1114 I | M | | Wear Sensor | NU 3866 |
| D 1115 I | M | | Piston Clip 2 per plate | NU 3118 |



Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|--------------|---------|---------|-------------------------|-----------------|
| D 1118 I | M | | Wear Sensor | NU 3870 |
| D 1119 I | M | | Wear Sensor LH | NU 3871-L |
| D 1119 I | M | | Wear Sensor RH | NU 3871-R |
| D 1120 I | M | | Wear Sensor | NU 3872 |
| D 1124 I | M | | Wear Sensor | NU 3866 |
| D 1125 I | M | | Wear Sensor | NU 3096 |
| D 1130 | M | | Roller Pin 4 per plate | NU 3806 |
| D 1138 O | M | | Wear Sensor | NU 3091 |
| D 1139 I | M | | Piston Clip | NU 3088 |
| D 1140 I | M | | Piston Clip | NU 3115 |
| D 1149 | M | | Wear Sensor | NU 3805 |
| D 1156 I | M | | Wear Sensor | NU 3873 |
| D 1157 I | M | | Wear Sensor | NU 3875 |
| D 1159 | M | | Wear Sensor | NU 3874 |
| D 1160 | M | | Wear Sensor | NU 3113 |
| D 1169 | M | | Wear Sensor | NU 3876 |
| D 1172 | M | | Wear Sensor | NU 2241 |
| D 1180 | M | | Wear Sensor | NU 3877 |
| D 1183 I | M | | Wear Sensor | NU 3808 |
| D 1186 I | M | | Piston Clip | NU 2200 |
| D 1186 I | M | | Wear Sensor LH | NU 3043 |
| D 1186 I | M | | Wear Sensor RH | NU 3044 |
| XD 1192 I | M | | Wear Sensor | NU 3878 |
| D 1194 I | M | | Wear Sensor | NU 2193 |
| D 1195 I | M | | Wear Sensor | NU 3879 |
| D 1202 I | M | | Wear Sensor | NU 3880 |
| D 1224 | M | | Wear Sensor | NU 2146 |
| D 1224 | M | | Wear Sensor | NU 2166 |
| D 1230 I | M | | Piston Clip | NU 3831 |
| D 1249 IL | M | | Wear Sensor | NU 3126 |
| D 1249 IR | M | | Wear Sensor | NU 3126 |
| D 1252 I | M | | Wear Sensor | NU 3850 |
| D 1262 I | M | | Wear Sensor | NU 2206 |
| D 1264 I | M | | Wear Sensor | NU 3096 |
| D 1273 I | M | | Wear Sensor | NU 2206 |
| D 1274 I | M | | Wear Sensor LH | NU 3845-L |
| D 1274 I | M | | Wear Sensor RH | NU 3845-R |
| D 1275 I | M | | Wear Sensor | NU 3859 |
| D 1276 I | M | | Wear Sensor | NU 3000 |
| D 1278 I | M | | Piston Clip 2 per plate | NU 3887 |
| D 1278 I | M | | Anti-Rattle LH | NU 3889-L |
| D 1278 I | M | | Anti-Rattle RH | NU 3889-R |
| D 1278 O | M | | Anti-Rattle LH | NU 3886-L |
| D 1278 O | M | | Anti-Rattle RH | NU 3886-R |
| D 1279 I | M | | Piston Clip | NU 3831 |
| D 1279 O | M | | Piston Clip | NU 3103 |
| D 1280 IL/OR | M | | Wear Sensor | NU 3888 |
| D 1280 IR/OL | M | | Wear Sensor | NU 3888 |
| D 1281 I | M | | Wear Sensor | NU 3834 |
| D 1284 I | M | | Wear Sensor | NU 3859 |



Hardware Application Listings

| FMSI Number | Moulded | Riveted | Hardware Description | Hardware Number |
|-------------|---------|---------|-------------------------|-----------------|
| D 1285 I | M | | Wear Sensor | NU 3113 |
| D 1286 I | M | | Wear Sensor | NU 3890 |
| D 1287 I | M | | Wear Sensor LH | NU 3845-L |
| D 1287 I | M | | Wear Sensor RH | NU 3845-R |
| D 1287 I | M | | Spring Clip 2 per plate | NU 3892 |
| D 1287 O | M | | Spring Clip 2 per plate | NU 3892 |
| D 1288 I | M | | Wear Sensor | NU 3891 |